

2TMD042000D0050 | 09.06.2021

Product manual ABB-Welcome

M2241.-W Video Indoor Station 7

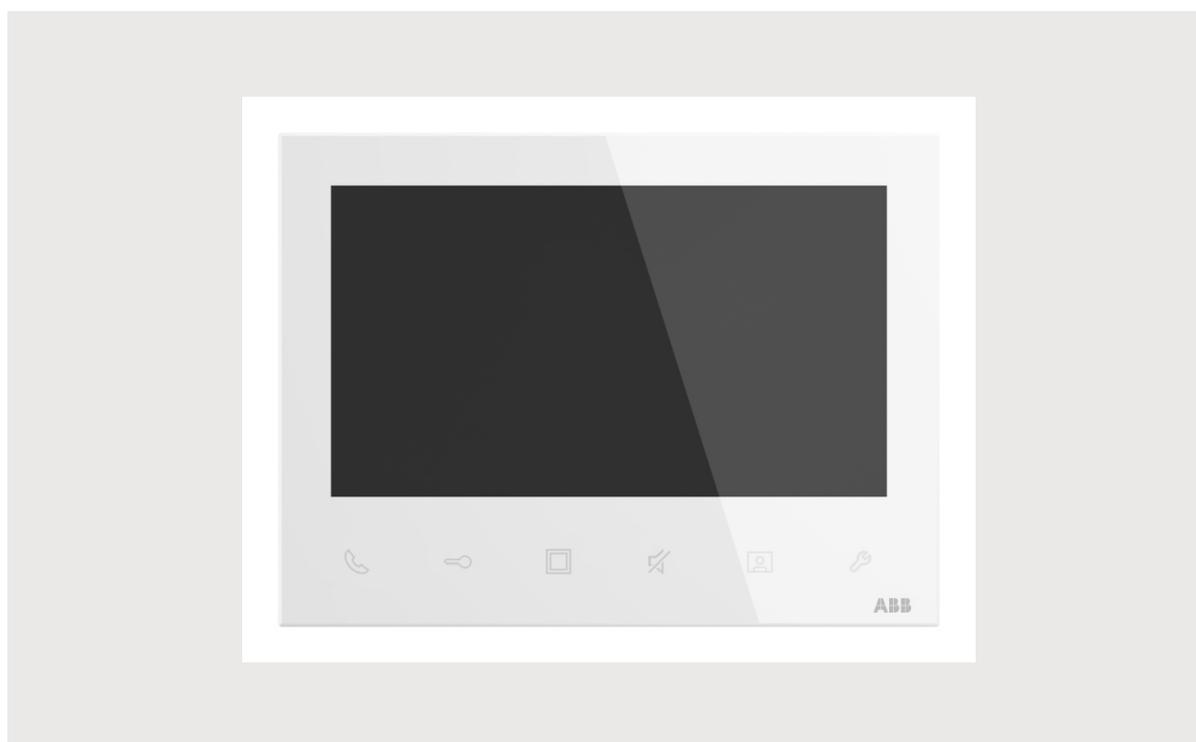


Table of contents

1	Notes on the instruction manual	4
2	Safety	4
3	Intended use	4
4	Environment	5
4.1	ABB devices	5
5	Product description	6
5.1	Device type	6
5.2	Control elements	7
5.3	Terminal description	9
6	Technical data	10
7	Mounting/Installation	11
7.1	Requirement for the electrician	11
7.2	General installation instructions	12
7.3	Mounting	13
7.3.1	Installation height	13
7.3.2	Surface-mounted installation	13
7.3.3	Dismantling	14
8	Commissioning	15
8.1	Operating instructions	15
8.2	Initial setup	16
9	Operation	21
9.1	Incoming call	21
9.1.1	Incoming call from outdoor station	21
9.1.2	Incoming call from indoor station/guard unit	25
9.2	Surveillance	27
9.3	Intercom	29
9.4	Program button	30
9.5	History	31
9.5.1	Accessing the "History" screen	31
9.5.2	Displaying history records	32
9.5.3	Removing history records	34
10	Setting	36
10.1	Camera list	36
10.1.1	Accessing the "Camera list" screen	36
10.1.2	Creating a camera list	37
10.1.3	Renaming the camera	38
10.1.4	Previewing the camera	40
10.1.5	Visual doorbell setting	42
10.1.6	Removing the camera	45
10.2	Program button settings	47

Table of contents

10.2.1	Accessing the "Program button" screen	47
10.2.2	Adding a program function	48
10.2.3	Testing the program function.....	50
10.2.4	Removing the program function.....	51
10.3	Intercom settings	53
10.3.1	Accessing the "Intercom list" screen	53
10.3.2	Adding an intercom.....	54
10.3.3	Removing the intercom.....	56
10.4	Audio settings.....	58
10.4.1	Accessing the "Audio settings" screen	58
10.4.2	Setting the feedback tone.....	59
10.4.3	Setting the ringtone volume.....	60
10.4.4	Setting the ringtone type	61
10.5	Unlock password	63
10.6	Date and time settings	66
10.7	Display settings	68
10.8	Language setting	69
10.9	About	70
10.10	Restoring to factory default.....	71
11	Cyber security	72
11.1	Disclaimer	72
12	Notice	73

1 Notes on the instruction manual

Please read through this manual carefully and observe the information it contains. This will assist you in preventing injuries and damage to property and ensure both reliable operation and a long service life for the device.

Please keep this manual in a safe place. If you pass the device on, also pass on this manual along with it. ABB accepts no liability for any failure to observe the instructions in this manual.

2 Safety



Warning

Electric voltage!

Dangerous currents flow through the body when coming into direct or indirect contact with live components.

This can result in electric shock, burns or even death.

- Disconnect the mains power supply prior to installation and/or disassembly!
- Permit work on the 100-240 V supply system to be performed only by specialist staff!

3 Intended use

This device is an integral part of the ABB-Welcome door communication system and operates exclusively with components from this system. The device must only be installed in dry indoor rooms.

Cleaning



Caution

Risk of damage to the screen surface

The screen surface can be damaged by hard or sharp objects!

Never use such objects for entries on the touch screen monitor.

- Use your finger or a plastic stylus.

The screen surface can be damaged by cleaning fluids or abrasive agents!

- Clean the surfaces using a soft cloth and commercially available glass cleaner.

- Never use abrasive cleaning agents.

4 Environment

**Consider the protection of the environment!**

Used electric and electronic devices must not be disposed of with household waste.

- The device contains valuable raw materials that can be recycled. Therefore, dispose of the device at the appropriate collecting facility.

4.1 ABB devices

All packaging materials and devices from ABB bear the markings and test seals for proper disposal. Always dispose of the packing materials and electric devices and their components via an authorized collection facility or disposal company.

ABB products meet the legal requirements, in particular the laws governing electronic and electrical devices and the REACH ordinance.

(EU-Directive 2012/19/EU WEEE and 2011/65/EU RoHS)


(EU-REACH ordinance and law for the implementation of the ordinance (EG) No.1907/2006)

5 Product description

5.1 Device type

Article number	Product ID	Product name	Colour	Size (mm)
M22411-W	2TMA210051W0001	Video Indoor Station 7	White	184.2 x 137.6 x 19
M22413-W	2TMA210051W0002	Video Indoor Station 7, T-loop	White	184.2 x 137.6 x 19

5.2 Control elements

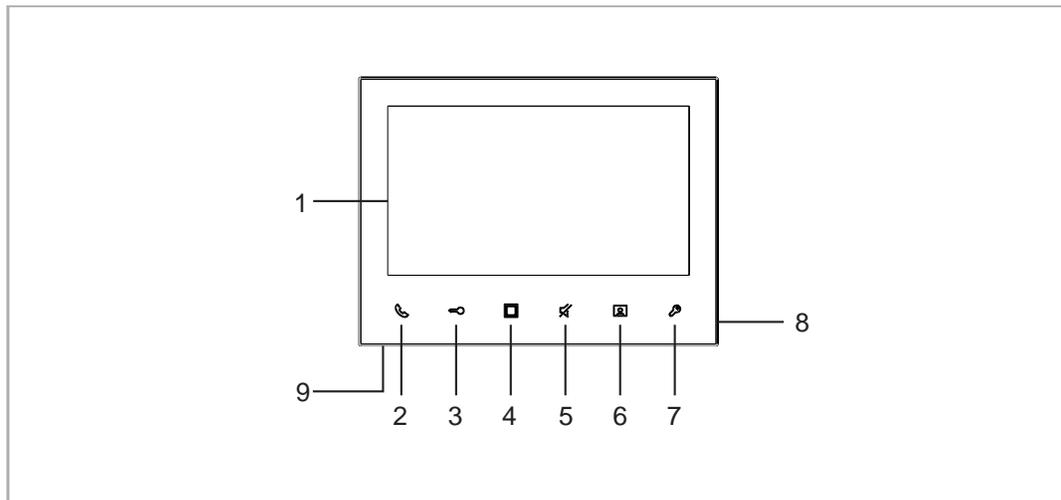


No.	Description
1	7" colour display
2	<p>Call button</p> <ul style="list-style-type: none"> ▪ In standby status, press to access the "Intercom" screen. ▪ During a call request, press to accept the call. ▪ During communication, press to terminate the call. ▪ During surveillance, press to activate the manual call.
3	<p>Unlock button</p> <ul style="list-style-type: none"> ▪ In standby status, press to release the default lock of default outdoor station. Long press 3 seconds to enable/disable the "Auto unlock" function on the primary indoor station. ▪ During a call request or communication, press to release the default lock of the outdoor station which is calling. ▪ During surveillance, press to release the default lock of the outdoor station which is under surveillance.
4	<p>Program button</p> <p>In standby status, press to release the 2nd lock of the default outdoor station by default. If multiple functions are set to the program button, press to access the "Program button" screen.</p>
5	<p>Mute button</p> <ul style="list-style-type: none"> ▪ In standby status, press to activate/mute the ringtone. ▪ In standby status, long press to mute the ringtone of all indoor stations in the same apartment. ▪ During a call request, press to activate/mute the ringtone and the call will be terminated after 5 seconds. ▪ During communication, press to activate/mute the microphone.
6	<p>Surveillance button</p> <ul style="list-style-type: none"> ▪ In standby status, press to monitor the default outdoor station. ▪ During call request, if "One on" mode is used on the (mini) system controller, only the primary indoor station can show the image, for the secondary indoor station this button needs to be pressed to obtain the image. ▪ During communication, long press to take a snapshot. ▪ During surveillance, press to switch to the next video stream or terminate the surveillance.

7	Setting button <ul style="list-style-type: none"> ▪ In standby status, press to enter the system settings. ▪ During a call request, communication or surveillance, press to set the volume, colour, contrast and brightness.
8	Microphone
9	Speaker


Induction loop

The induction loop is used for hearing-impaired persons. They can wear a hearing aid to hear the voice from the outdoor station or the indoor station.

The indoor station supports the hearing aids with "T" function and the maximum distance between them is around 35 cm.

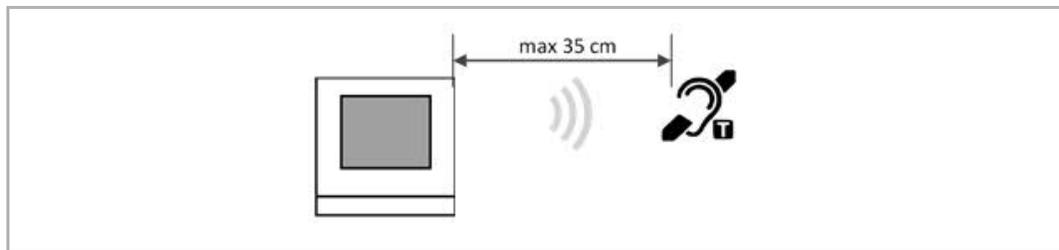

5.3 Terminal description

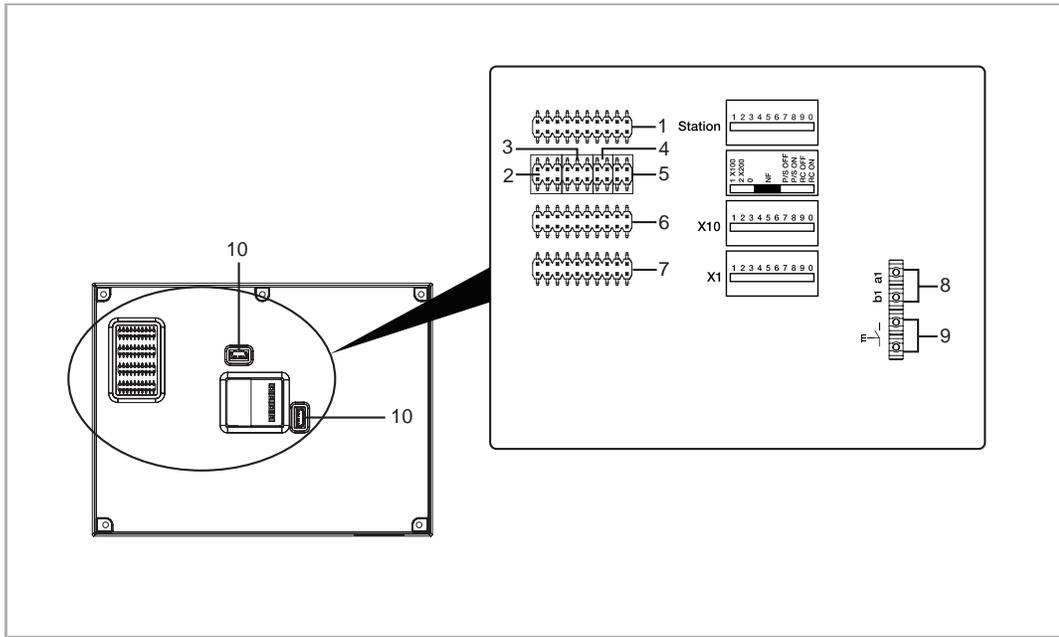

No.	Description
1	Default outdoor station address Adjust the jumper connector to set the address of the default outdoor station (1-9).
2	Indoor station hundreds digit Adjust the jumper connector to set the hundreds digit of indoor station among "X200", "X100" and "0".
3	No function
4	Primary/Secondary indoor station Only one indoor station in each apartment can be set as "Primary" (ON=Primary).
5	Terminal resistor In video installations or mixed audio and video installations, the switch must be set as 'RC on' on the last device of the line (ON=RC on).
6	Indoor station tens digit Adjust the jumper connector to set the tens digit of indoor station (0-9).
7	Indoor station units digit Adjust the jumper connector to set the units digit of indoor station (0-9).
8	a1, b1 = bus connector
9	A potential free contact, such as a doorbell pushbutton
10	Only for factory use

6 Technical data

Designation	Value
Operating voltage range	20-30 V $\overline{=}$
Standby current	24 V $\overline{=}$, 8 mA
Operating current	24 V $\overline{=}$, 290 mA
Operating temperature	5 °C...+45 °C
Storage temperature	-20 °C...+60 °C
Single-wire clamps	2 x 0.28 mm ² ...2 x 0.75 mm ²
Fine-wire clamps	2 x 0.28 mm ² ...2 x 0.75 mm ²
Product dimension (WxHxD)	184.2 x 137.6 x 19 mm
IP level	IP 30

7 Mounting/Installation

**Warning**

Electric voltage!

Dangerous currents flow through the body when coming into direct or indirect contact with live components.

This can result in electric shock, burns or even death.

- Disconnect the mains power supply prior to installation and/or disassembly!
- Permit work on the 100-240 V supply system to be performed only by specialist staff!

7.1 Requirement for the electrician

**Warning**

Electric voltage!

Install the device only if you have the necessary electrical engineering knowledge and experience.

- Incorrect installation endangers your life and that of the user of the electrical system.
- Incorrect installation can cause serious damage to property, e.g. due to fire.

The minimum necessary expert knowledge and requirements for the installation are as follows:


- Apply the "five safety rules" (DIN VDE 0105, EN 50110):
 1. Disconnect
 2. Secure against being re-connected
 3. Ensure there is no voltage
 4. Connect to earth and short-circuit
 5. Cover or barricade adjacent live parts.
- Use suitable personal protective clothing.
- Use only suitable tools and measuring devices.
- Check the type of supply network (TN system, IT system, TT system) to secure the following power supply conditions (classic connection to ground, protective grounding, necessary additional measures, etc.).

7.2 General installation instructions


- Terminate all branches of the wiring system via a connected bus device (e.g. indoor station, outdoor station, system device).
- Do not install the system controller directly next to the bell transformer or other power supplies (to avoid interference).
- Do not install the wires of the system bus together with 100-240 V wires.
- Do not use common cables for the connecting wires of the door openers and wires of the system bus.
- Avoid bridges between different cable types.
- Use only two wires for the system bus in a four-core or multi-core cable.
- When looping, never install the incoming and outgoing bus inside the same cable.
- Never install the internal and external bus inside the same cable.

7.3 Mounting


7.3.1 Installation height

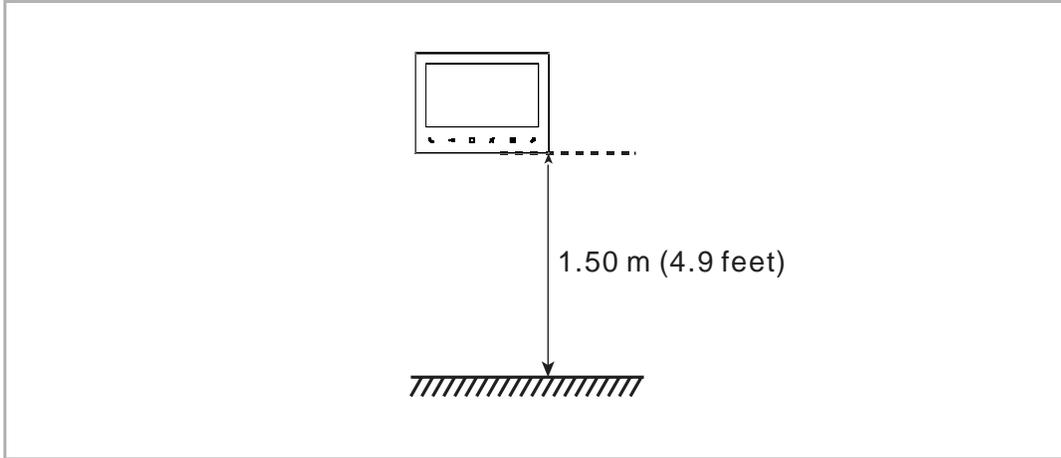

7.3.2 Surface-mounted installation

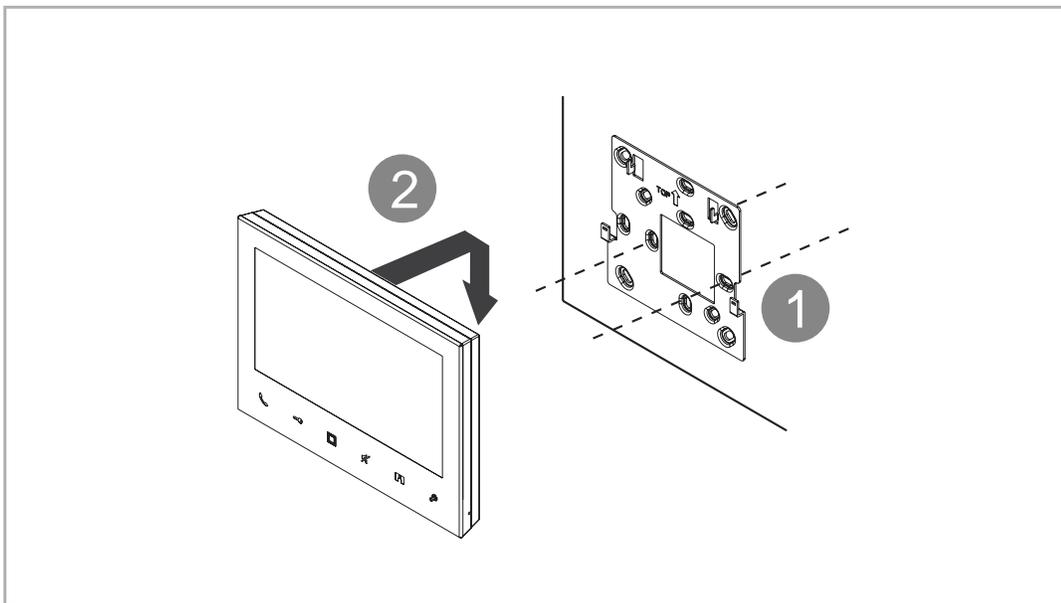

7.3.3 Dismantling

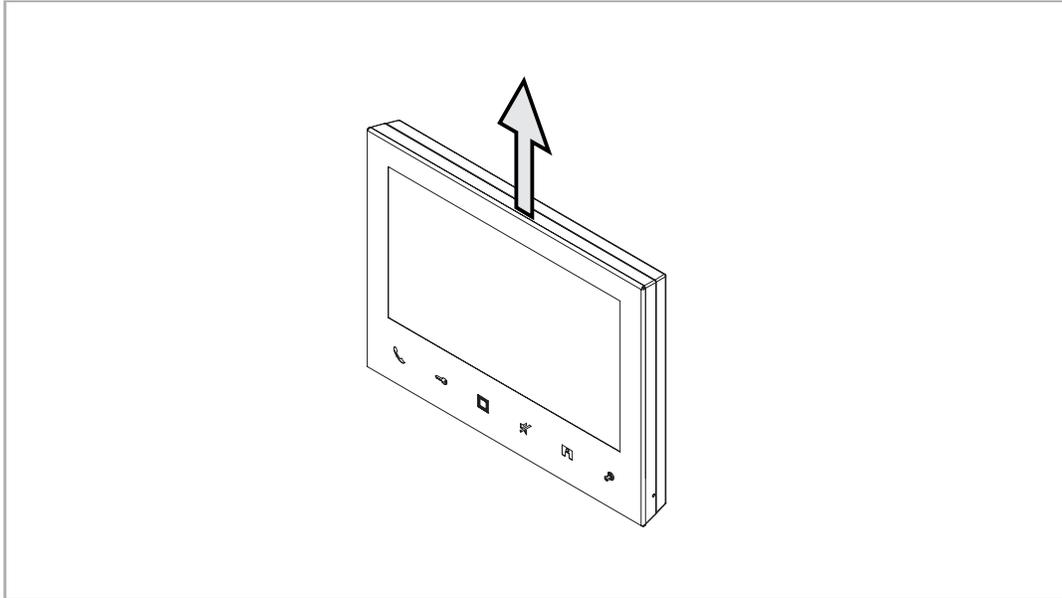


8 Commissioning

8.1 Operating instructions

Please read the rules below before use:

- To perform an operation by pressing the button below (e.g. press "  " to perform " ✓ ").
- To switch the selection by pressing " ^ " or " v ", the order of selection is from top to bottom and from left to right.
- To switch the number quickly by holding " ^ " or " v ".
- Press " ✓ " to carry out an operation like:
 - Enter the setting status
 - Confirm the update value
 - Go to next screen
- Press " ✕ " to carry out an operation like:
 - Exit the setting status
 - Cancel the update value
 - Go to previous screen

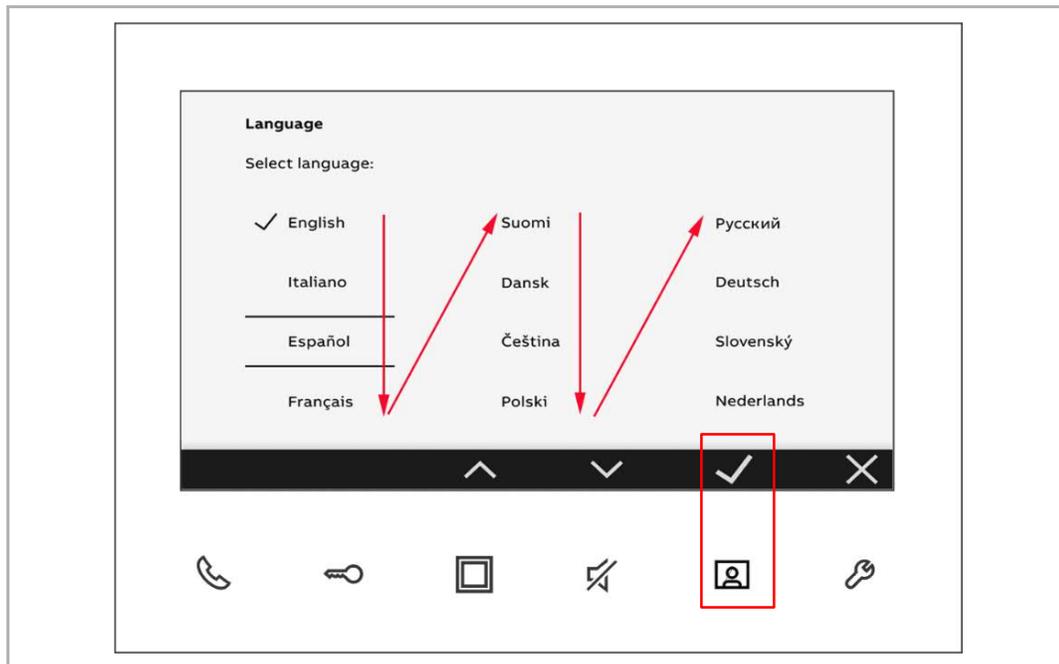

8.2 Initial setup

You need to do the initial setup the first time this indoor station is powered on or this indoor station is reset to the factory defaults.

Please follow the steps below:

[1] Select the language

A maximum of 17 languages for selection.



[2] Show the licence agreement

Licence Agreement

Show Licence Agreement

Agree Licence Agreement

^ v ✓ ✕

Licence Agreement for Software

Following Licenses are used in the products
M2241-W Video Indeo Indoor Station 7

Component:FreeBSD10.1
License: BSD 2-clause "Simplified"

Copyright (c) 2013 Ed Schouten <ed@FreeBSD.org>
All rights reserved.
Copyright (c) 1998 Doug Rabson
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:
1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.


THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

ABB End User License Agreement ("EULA")

IMPORTANT: PLEASE READ THE TERMS AND CONDITIONS OF THIS LICENSE AGREEMENT CAREFULLY BEFORE CONTINUING WITH THIS PROGRAM
INSTALL

^ v ✓ ✕


[3] Agree to the licence agreement

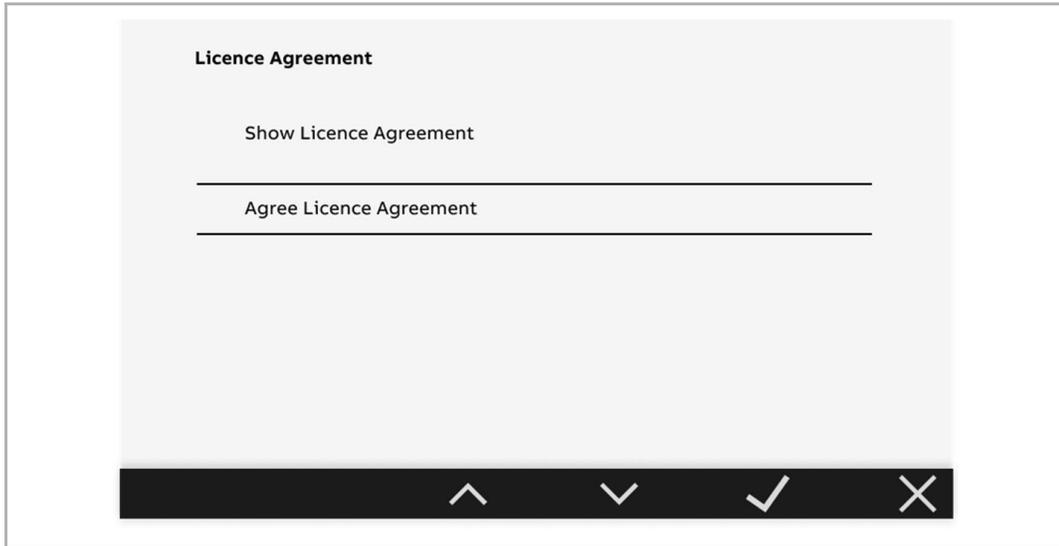

[4] Set the date and time

You can carry out this setting at this time or do it later by pressing "Next" to skip this setting.


For more details, see chapter 10.6 "Date and time settings" on page 66.

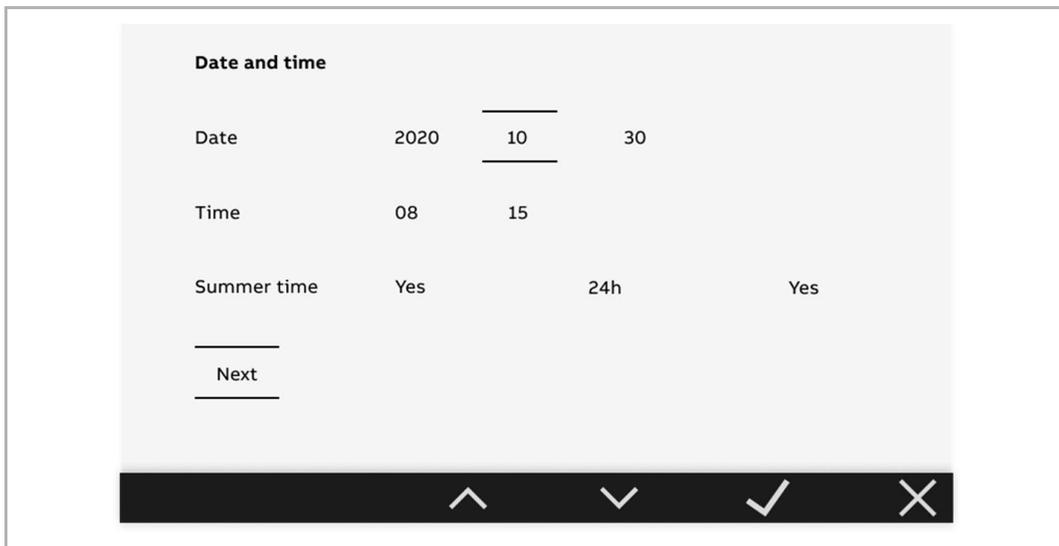

[5] Set the camera list

You can carry out this setting at this time or do it later by pressing "No" to skip this setting.


For more details, see chapter 10.1 "Camera list" on page 36.

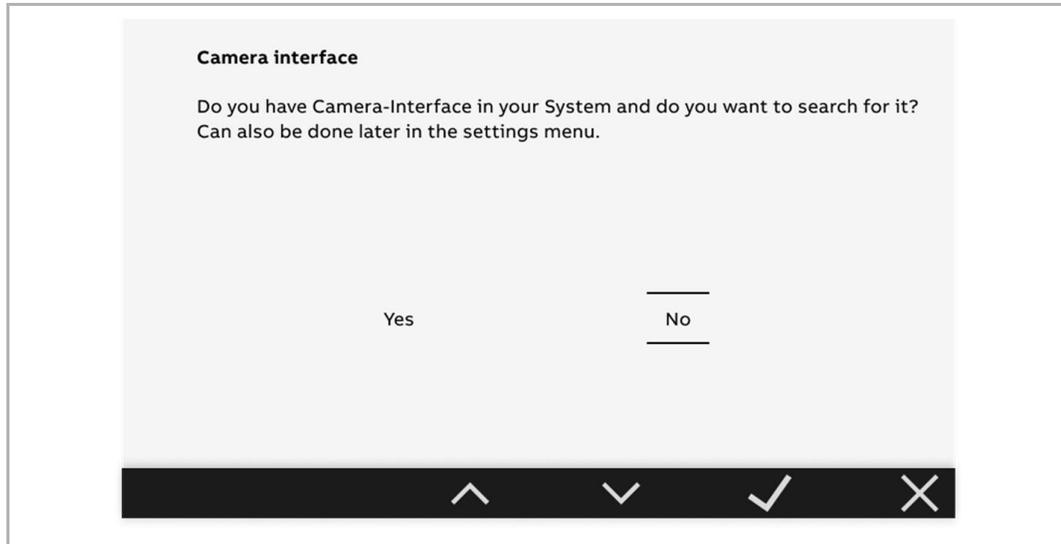

[6] Set the program button

You can carry out this setting at this time or do it later by pressing "No" to skip this setting.


For more details, see chapter 10.2 "Program button settings" on page 47.

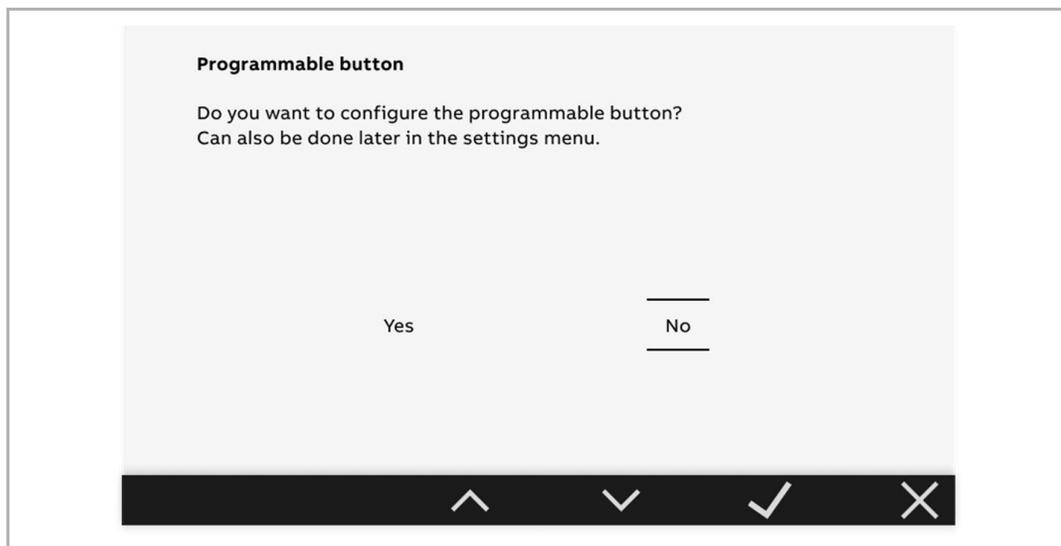


[7] Set the intercom list

You can carry out this setting at this time or do it later by pressing "No" to skip this setting.

For more details, see chapter 10.3 "Intercom settings" on page 53.

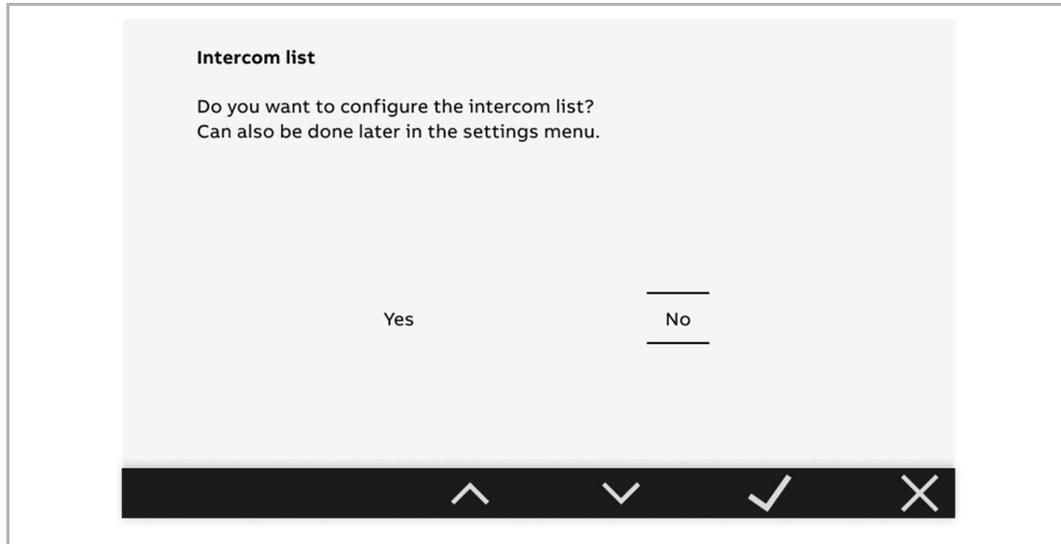

[8] Complete the initial setup

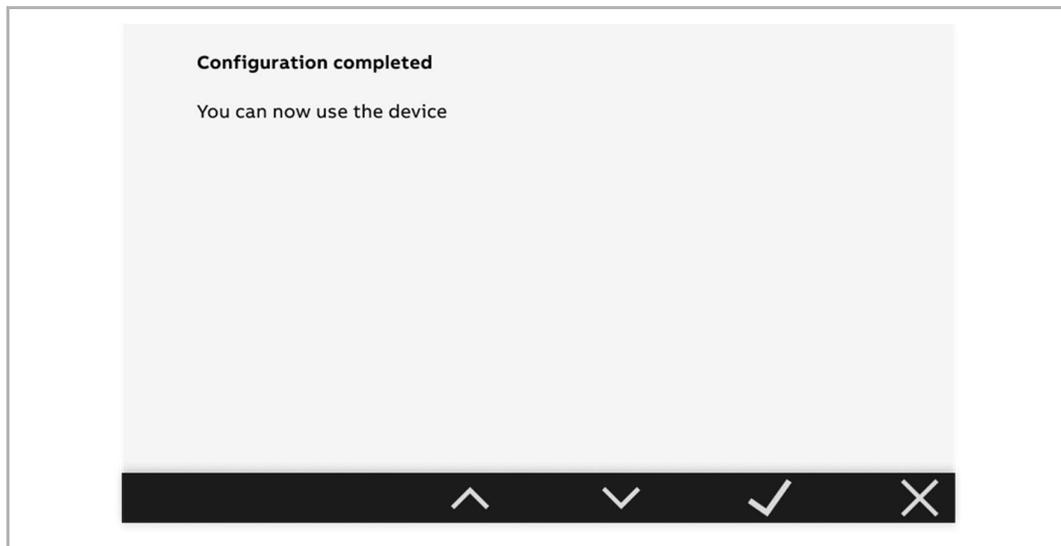


9 Operation

9.1 Incoming call

9.1.1 Incoming call from outdoor station

1. Call request

- During a call request, press "📞" to accept the call.
- During a call request, 2 snapshots will be taken automatically on the first second and the fifth second.

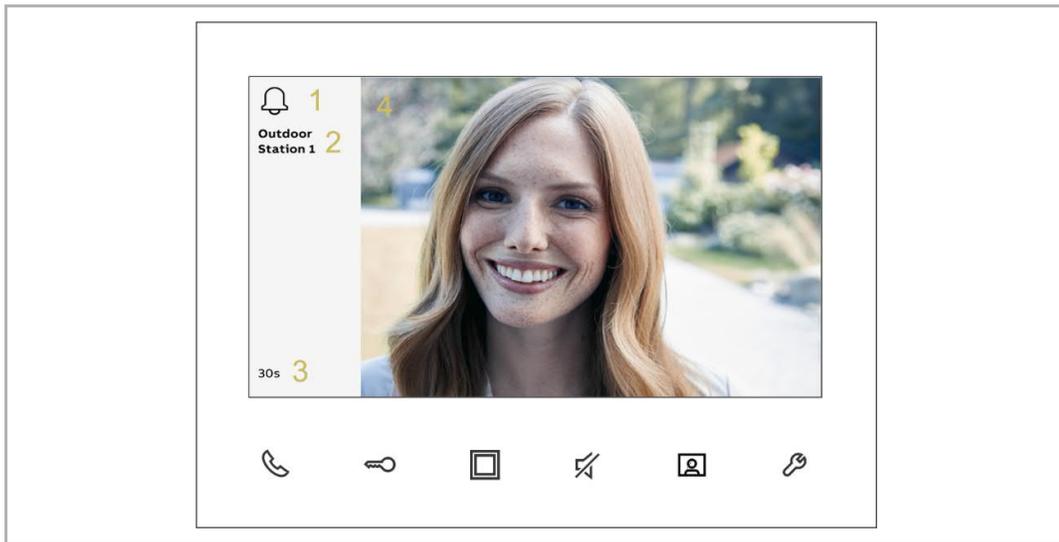

No.	Description
1	"📞" indicates the ring status.
2	Call ID
3	Display the rest of time (1...30 seconds) The call request will be terminated if no operation is carried out within 30 seconds.
4	Display the image from the calling outdoor station.



Note


If you want to set the ringtone for the incoming call, see chapter 10.4.4 "Setting the ringtone type" on page 61.



Note


During a call request, if "One on" mode is used on the (mini) system controller, only the primary indoor station can show the image, for the secondary indoor station "📷" needs to be pressed to obtain the image.

- During a call request, press "🔧" to set the volume, colour, contrast and brightness.

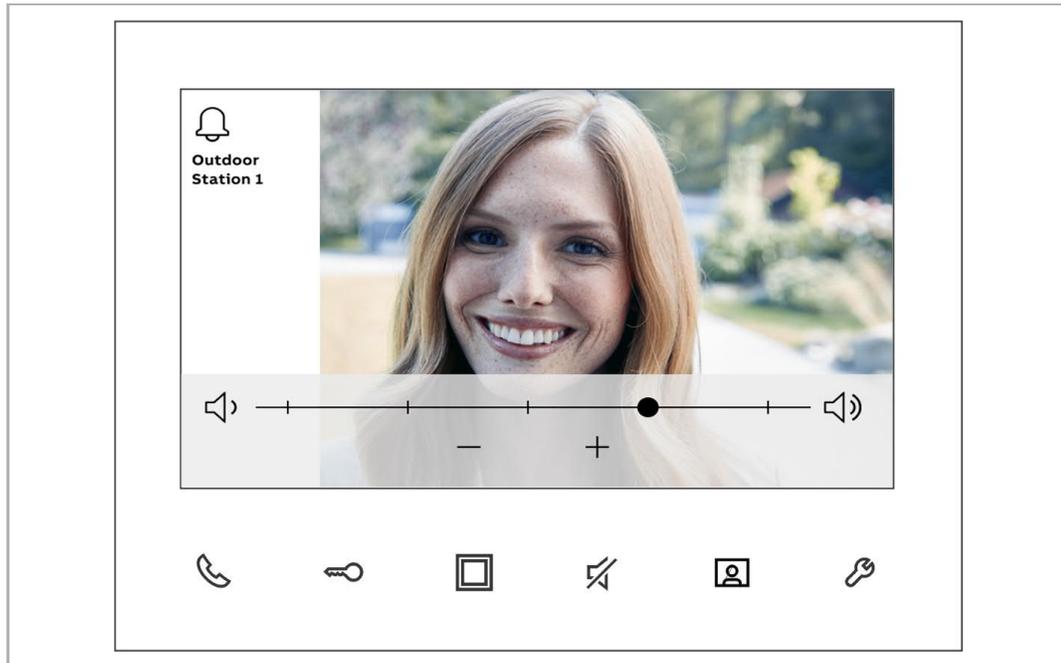


2. Communication

- During communication, press "📞" to terminate the call.
- During communication, long press "👤" to take a snapshot. This snapshot will be removed after 1 year.

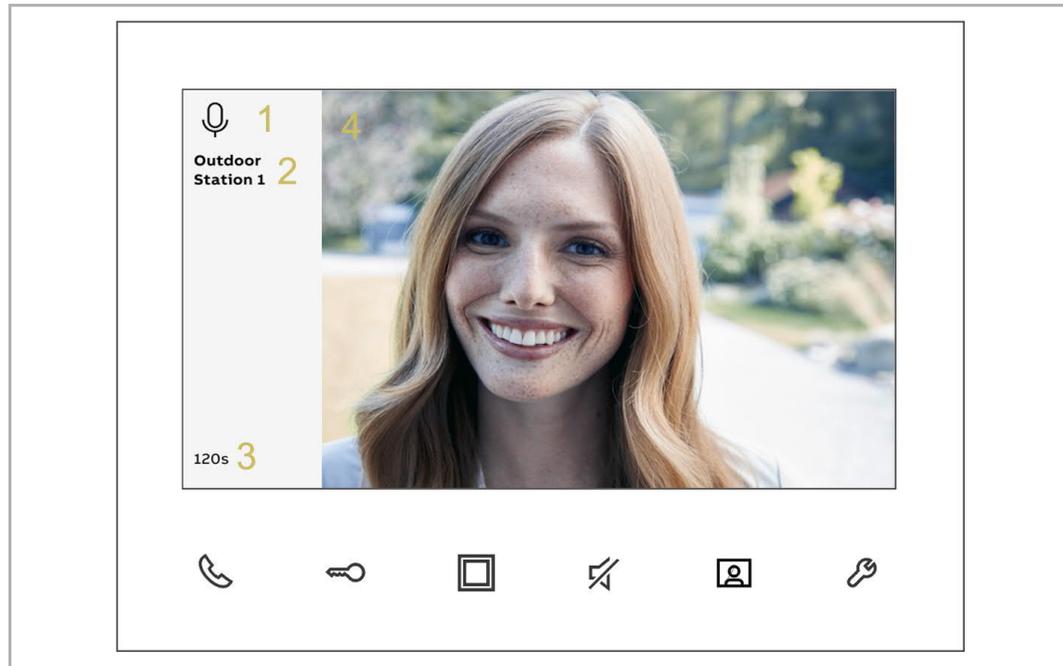

No.	Description
1	"📞" indicates the communication status.
2	Call ID
3	Display the rest of time (1...120 seconds)
4	Display the image from the calling outdoor station.


- During communication, press " 🔧 " to set the volume, colour, contrast and brightness.

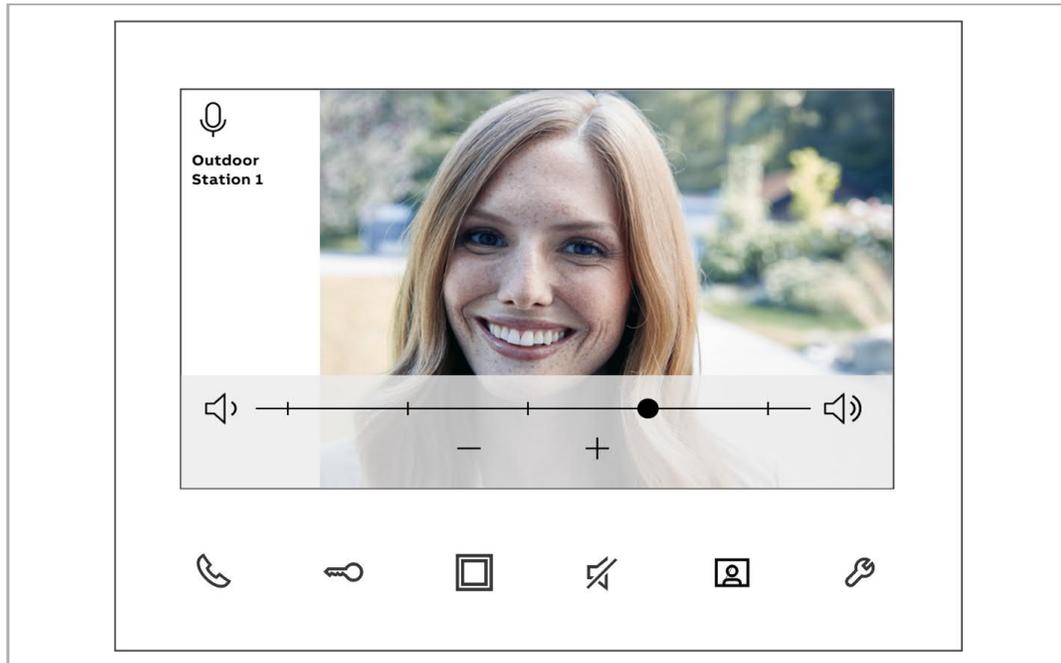

9.1.2 Incoming call from indoor station/guard unit

1. Call request

- During a call request, press "📞" to accept the call.

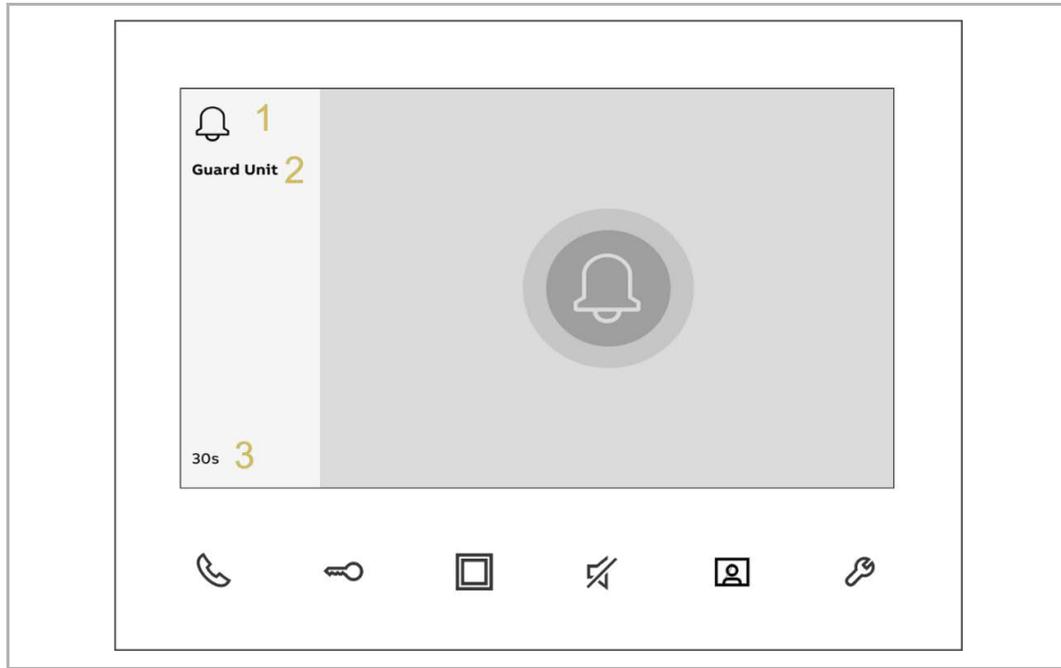

No.	Description
1	"📞" indicates the ring status.
2	Call ID
3	Display the rest of time (1...30 seconds) The call request will be terminated if no operation is carried out within 30 seconds.




Note

If you want to set the ringtone for the incoming call, see chapter 10.4.4 "Setting the ringtone type" on page 61.

2. Communication


- During communication, press "  " to terminate the call.

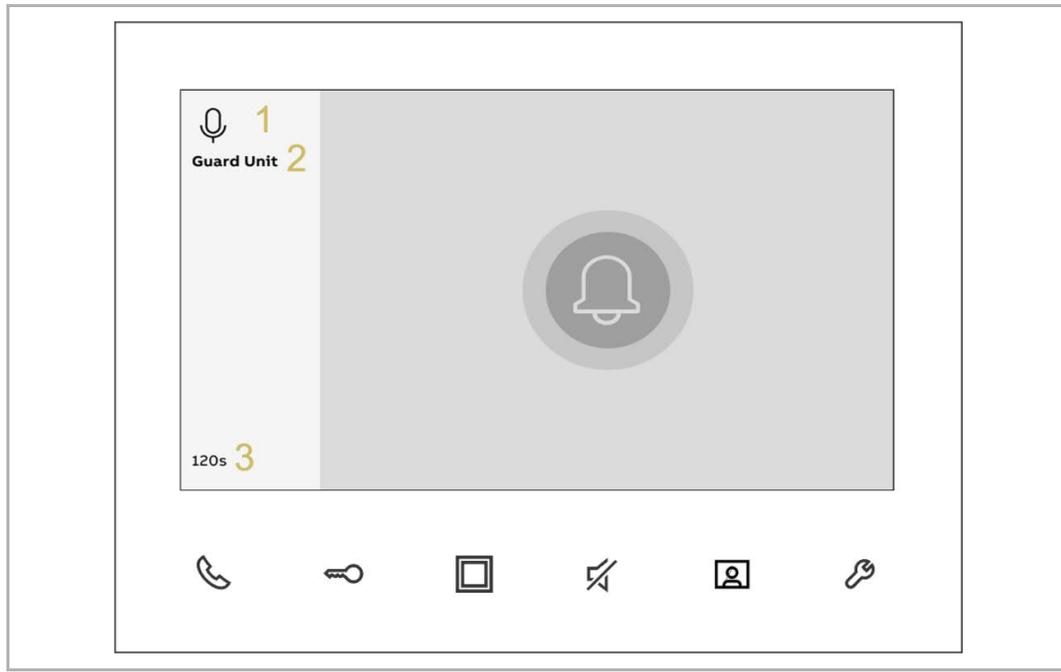

No.	Description
1	"  " indicates the communication status.
2	Call ID
3	Display the rest of time (1...120 seconds)


9.2 Surveillance

- In standby status, press "  " to monitor the default outdoor station.
- During surveillance, press "  " to activate the manual call.
- During surveillance, press "  " to release the default lock of the outdoor station which is under surveillance.
- During surveillance, press "  " to switch to the next image or terminate the surveillance.

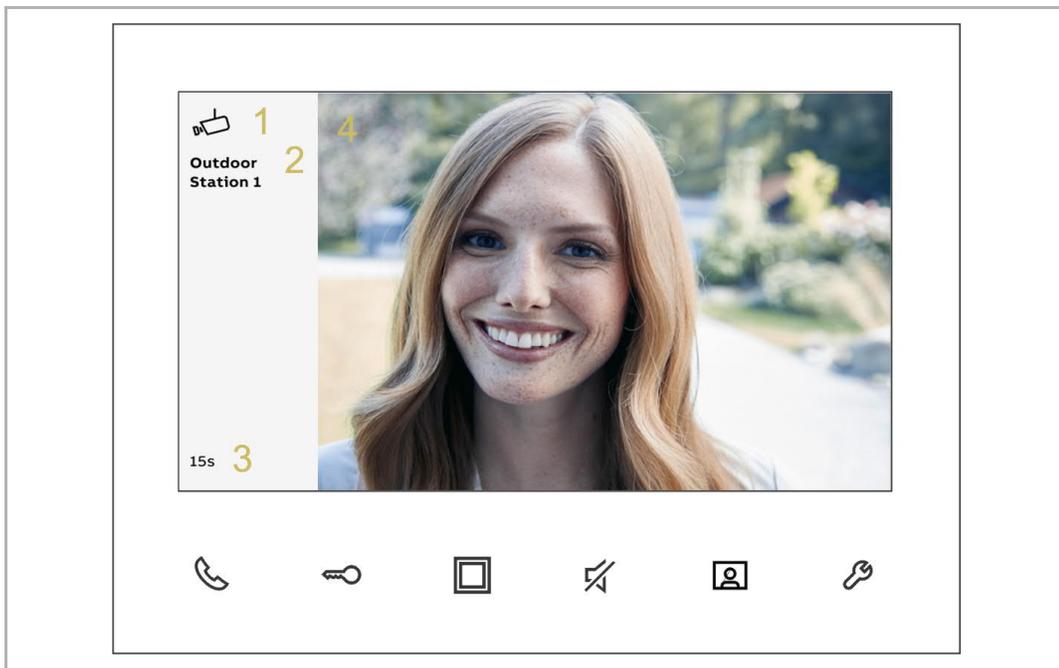

No.	Description
1	"  " indicates the surveillance status.
2	Device ID to be monitored
3	Display the rest of time (1...15 seconds)

- During surveillance, press "  " to set the volume, colour, contrast and brightness.

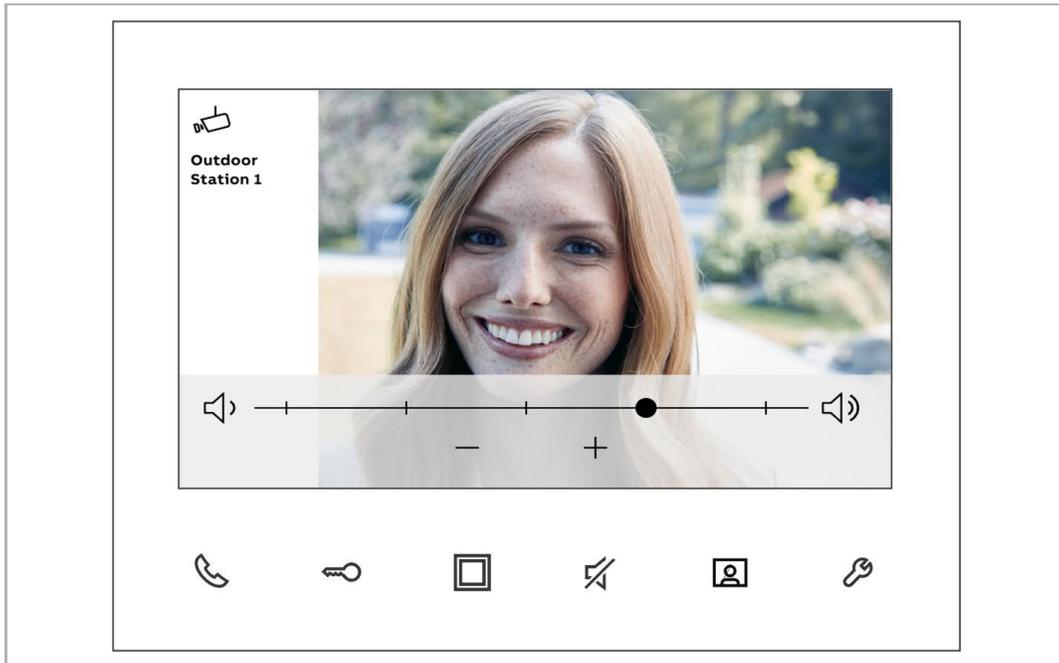

9.3 Intercom


Precondition

An intercom list needs to be added before use. For more information, see chapter 10.3 "Intercom settings" on page 53.

Initiating an intercom

Please follow the steps below:

- [1] In standby status, press "  " to access the "Intercom" screen.
- [2] Press the button below the designated intercom icon to initiate an intercom.

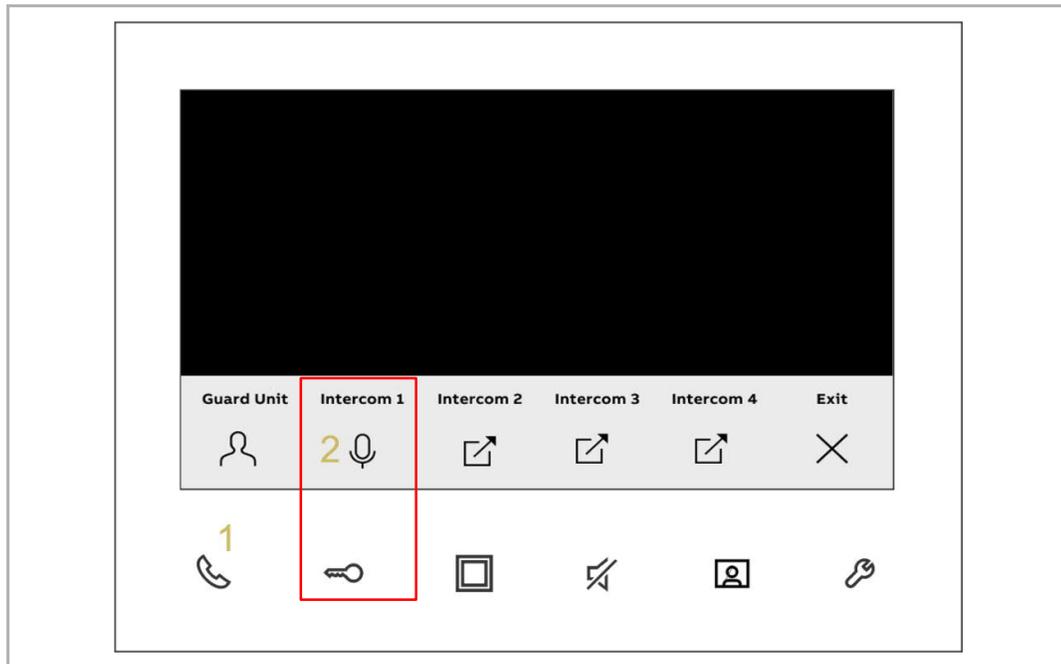

9.4 Program button


Precondition

Program functions need to be set before use. For more information, see chapter 10.2 "Program button settings" on page 47.

Initiating a program function

Please follow the steps below:

- [1] In standby status, press "  " to access the "Program button" screen.
- [2] Press the button below the designated program icon to initiate a program function.

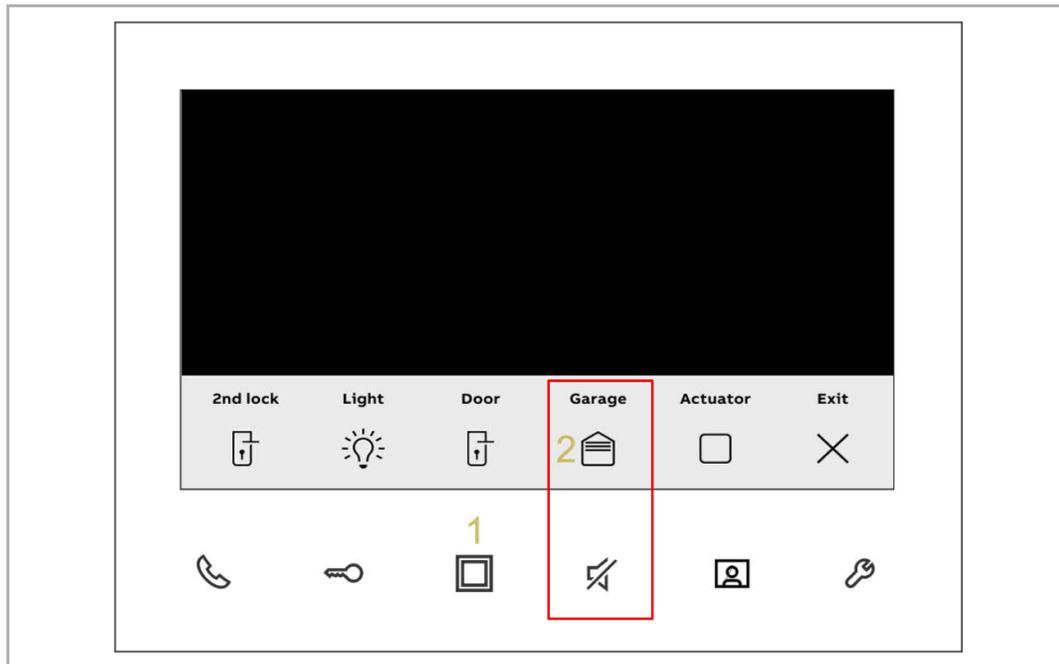


9.5 History

9.5.1 Accessing the "History" screen

Please follow the steps below:

- [1] In standby status, press " 🔑 ".
- [2] Select " ⌛ " on the side menu.
- [3] Press " ✓ " to access the corresponding screen.

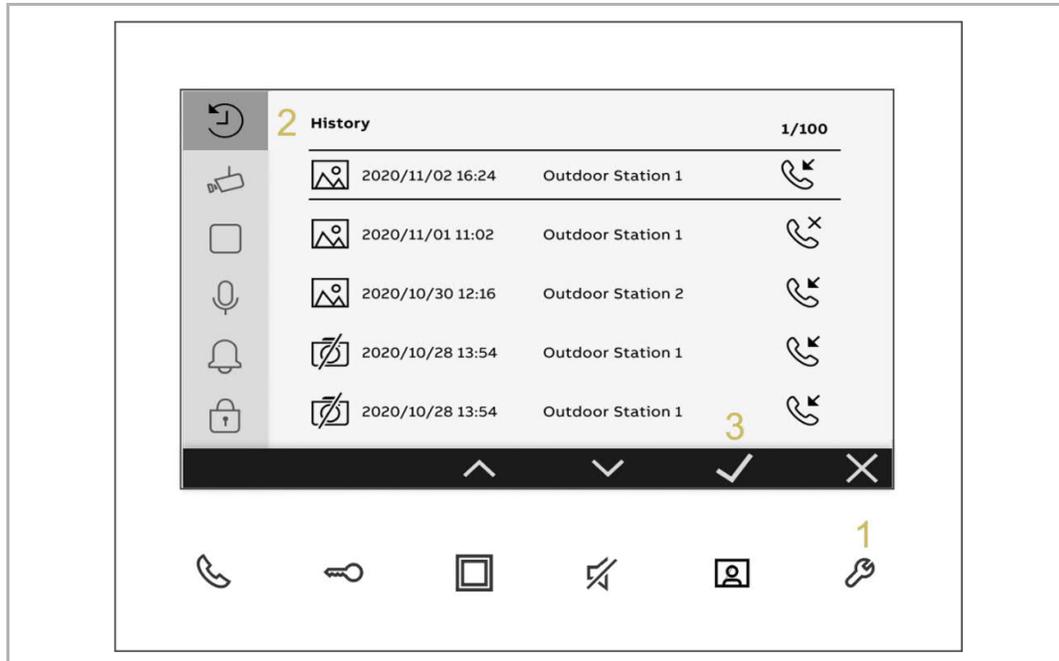


9.5.2 Displaying history records

Please follow the steps below:

[1] On the "History" screen, select the designated record.

- "  " means the record with snapshots.
- "  " means the record without snapshots.
- "  " means an incoming call from the outdoor station or an intercom call from other indoor stations or the guard unit.
- "  " means a surveillance or an intercom call to other indoor stations or the guard unit.
- "  " means a missed call.


[2] Press "  ".

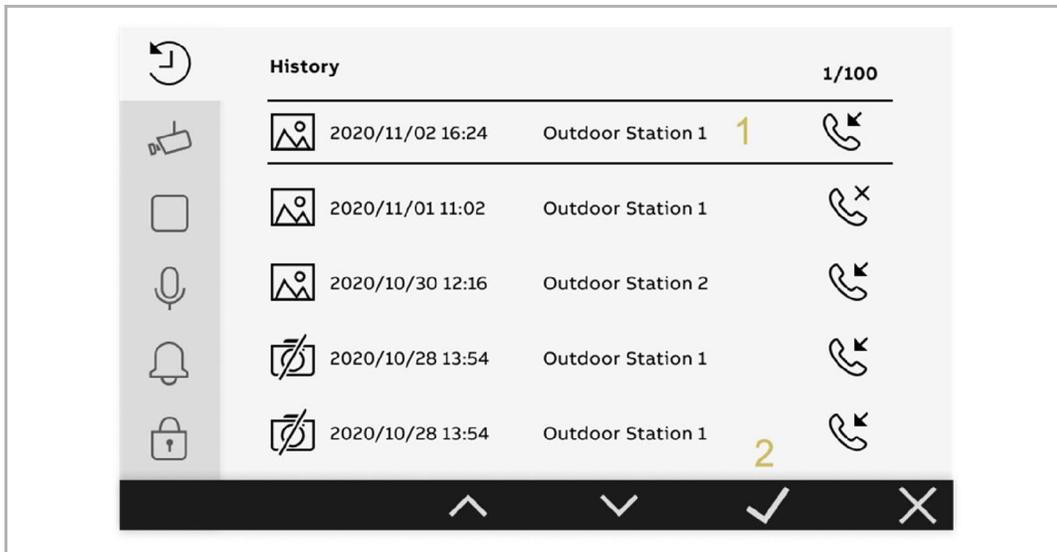

Note

A maximum of 100 records can be saved. Each record can include 2 snapshots and a maximum of 50 snapshots can be supported.


- [3] Display the date and time of the record.
- [4] Display the device ID.
- [5] Display the calling type.
- [6] Press " ^ " or " ∨ " to select the image.

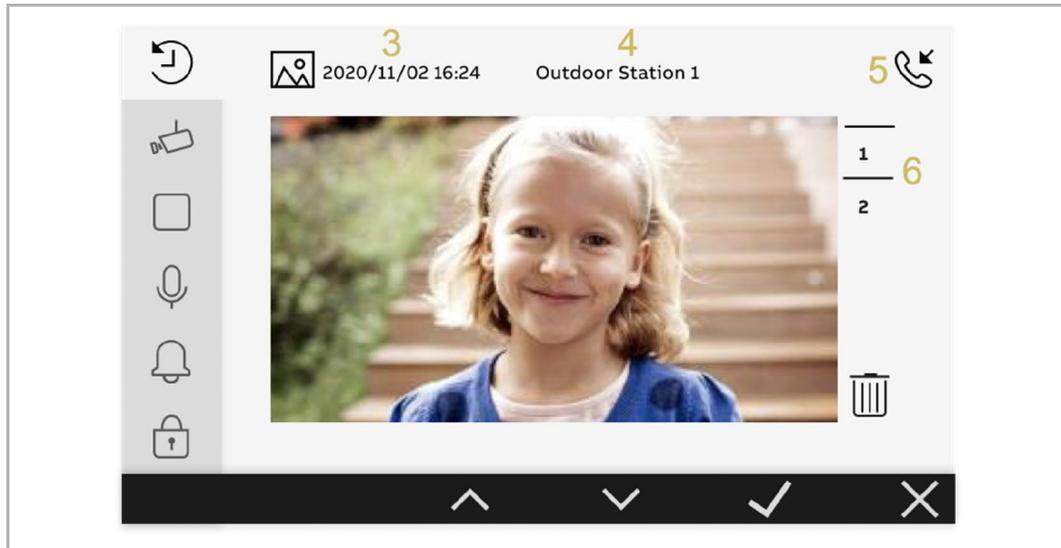


9.5.3 Removing history records

Please follow the steps below:

- [1] On the "History" screen, select the designated record.
- [2] Press " ✓ ".
- [3] Select " 🗑️ ".
- [4] Press " ✓ ".

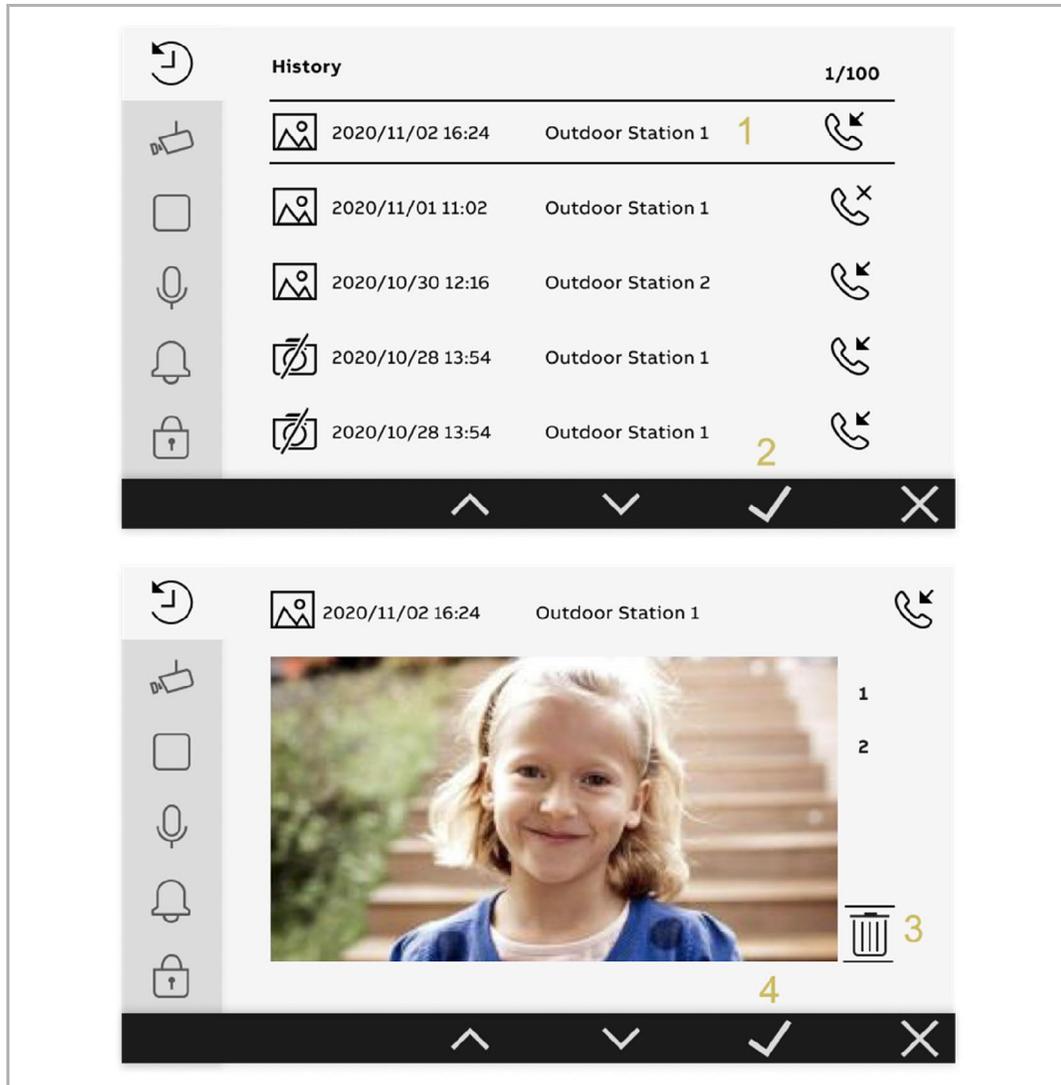

[5] Press " ✓ ".

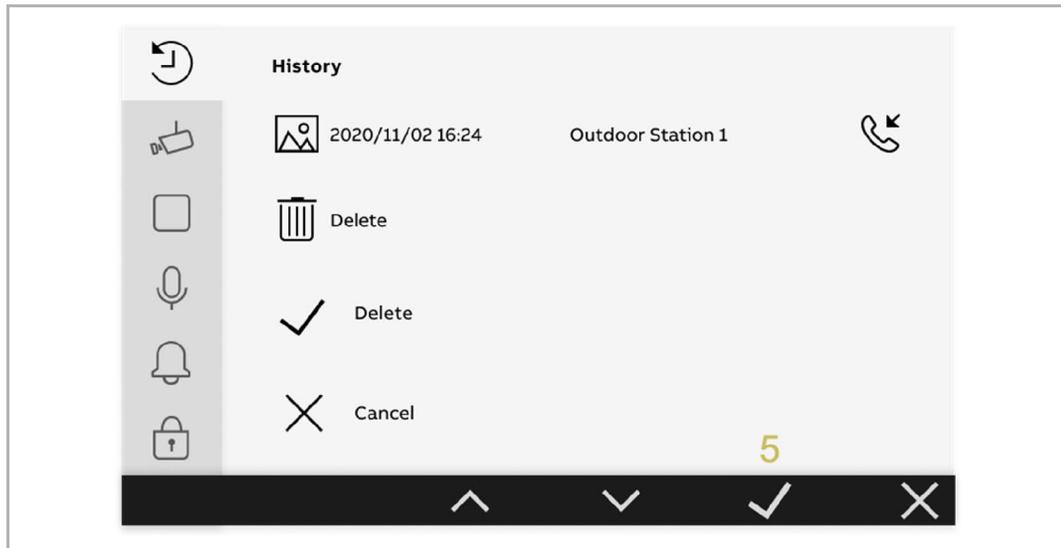


10 Setting

10.1 Camera list

10.1.1 Accessing the "Camera list" screen

Please follow the steps below:

- [1] In standby status, press " 🔑 ".
- [2] Select " 📷 " on the side menu.
- [3] Press " ✓ " to access the corresponding screen.

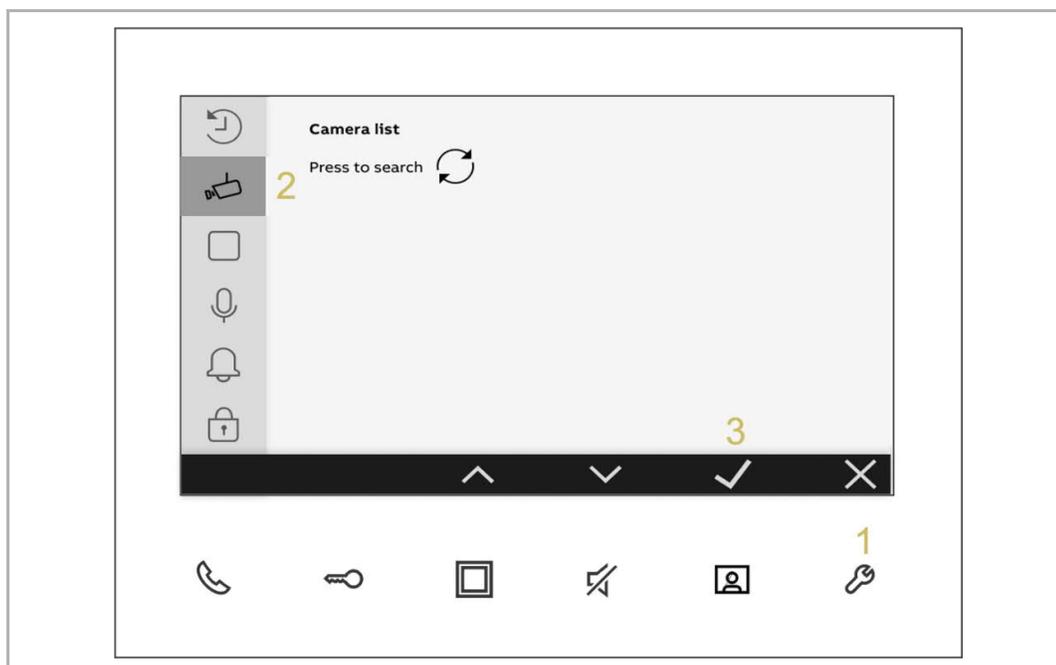

10.1.2 Creating a camera list

Please follow the steps below:

- [1] On the "Camera list" screen, press "↻" to search for cameras.
- [2] After a while, a camera list is created successfully.



10.1.3 Renaming the camera


Please follow the steps below:

[1] On the "Camera list" screen, select the designated camera.

[2] Press " ✓ ".

[3] Select " ✎ ".

[4] Press " ✓ ".

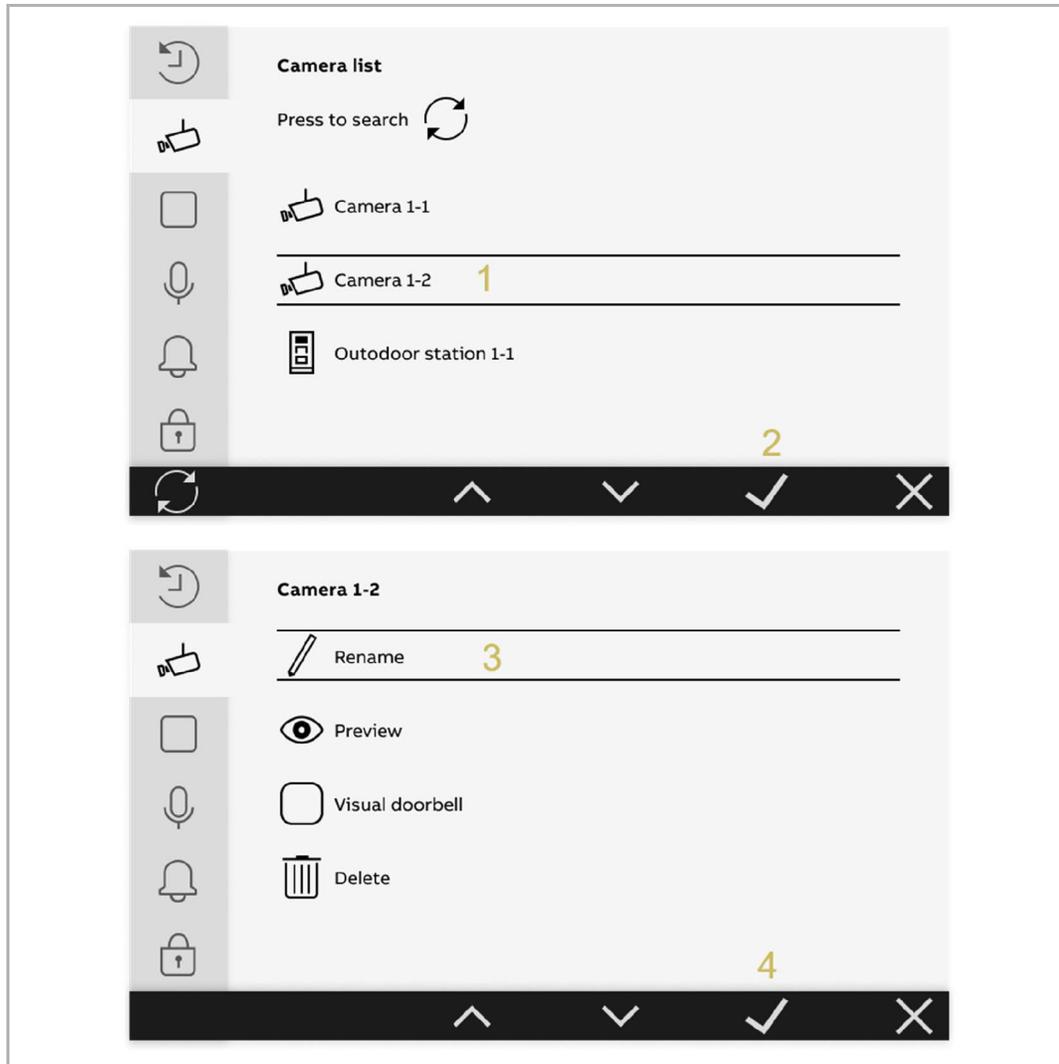


[5] Select a camera name.

[6] Press " ✓ ".



Note

If the cameras use the same name, they will be named with an incremented number (e.g. "Backdoor camera 1", "Backdoor camera 2" etc.)

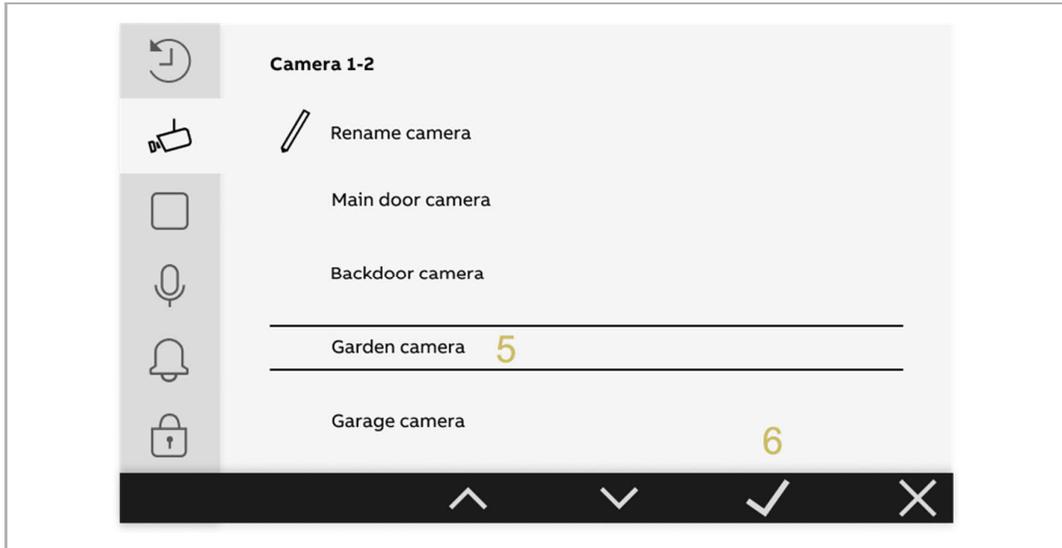

10.1.4 Previewing the camera


Please follow the steps below:

[1] On the "Camera list" screen, select the designated camera.

[2] Press " ✓ ".


[3] Select " 👁 Preview ".

[4] Press " ✓ ".

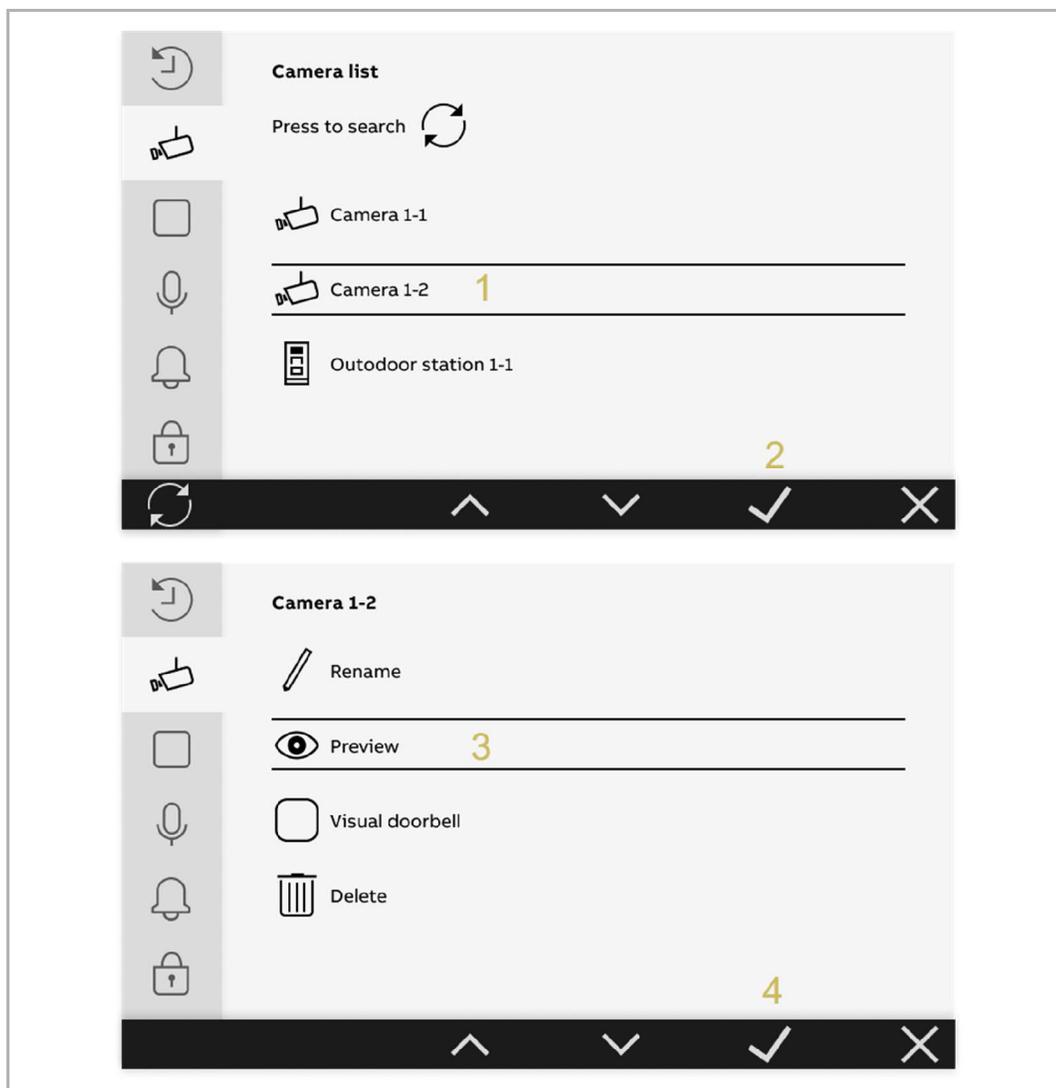


Warning message

A warning message will be displayed on the screen when the designated outdoor station is busy.

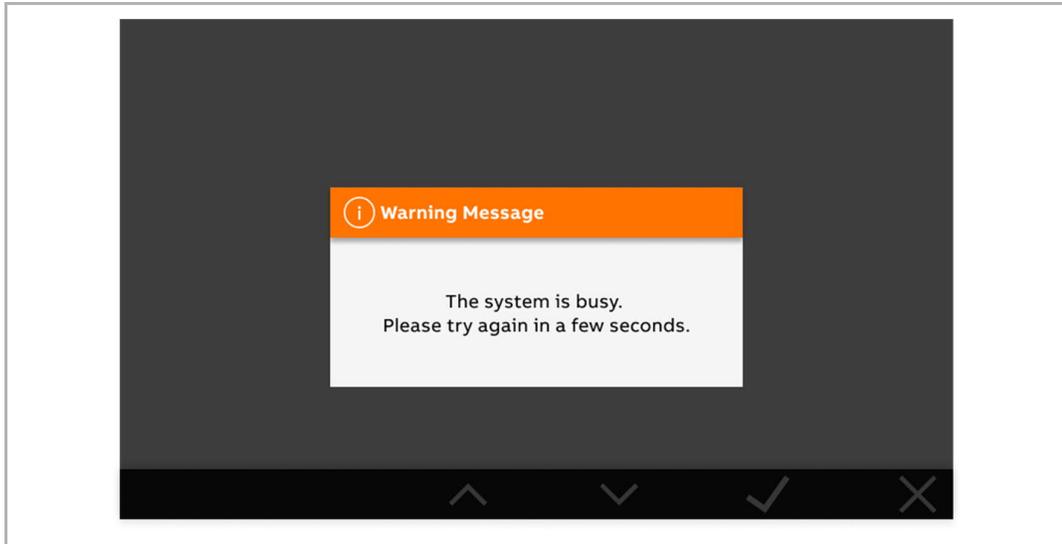**Error message**

An error message will be displayed on the screen if the designated outdoor station is not detected by the system.

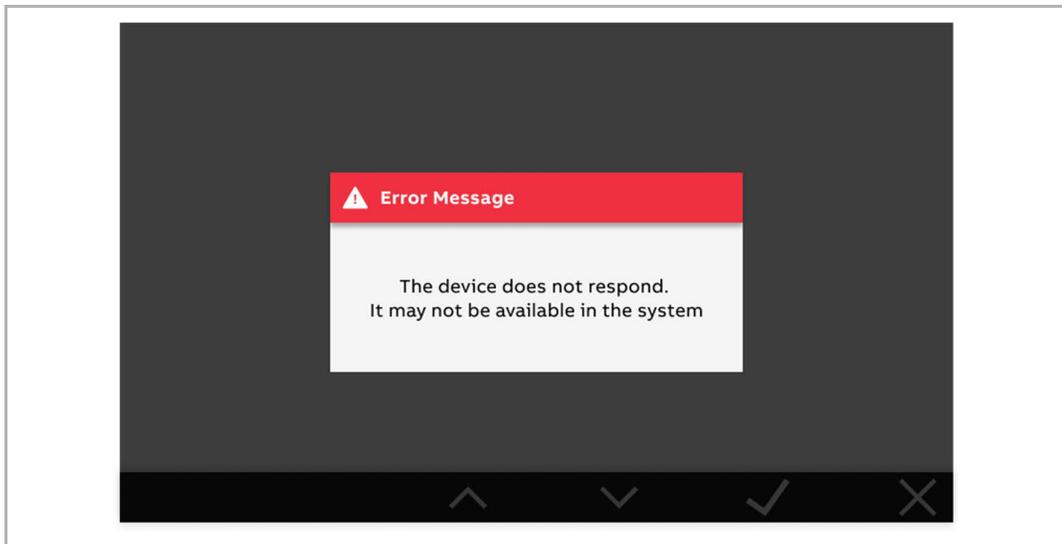

10.1.5 Visual doorbell setting

If a camera is set to "Visual doorbell", when the doorbell is pressed, the image on this camera will be displayed on the indoor station.


**Note**

The "Visual doorbell" function can only be set when a camera is connected to the camera interface and this camera interface has been associated with the indoor station (mode = 4). Please see the camera interface product manual for more details.


Please follow the steps below:

[1] On the "Camera list" screen, select the designated camera.

[2] Press " ✓ ".

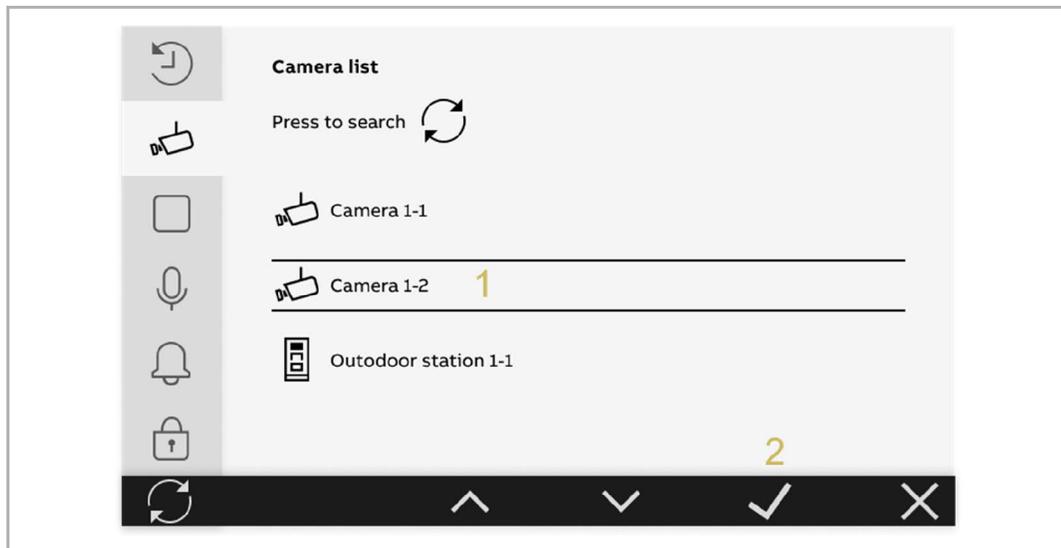

- [3] Select "  ".
- [4] Press "  ".
- [5] "  " will be displayed on the screen if successful.
- [6] Press "  ".

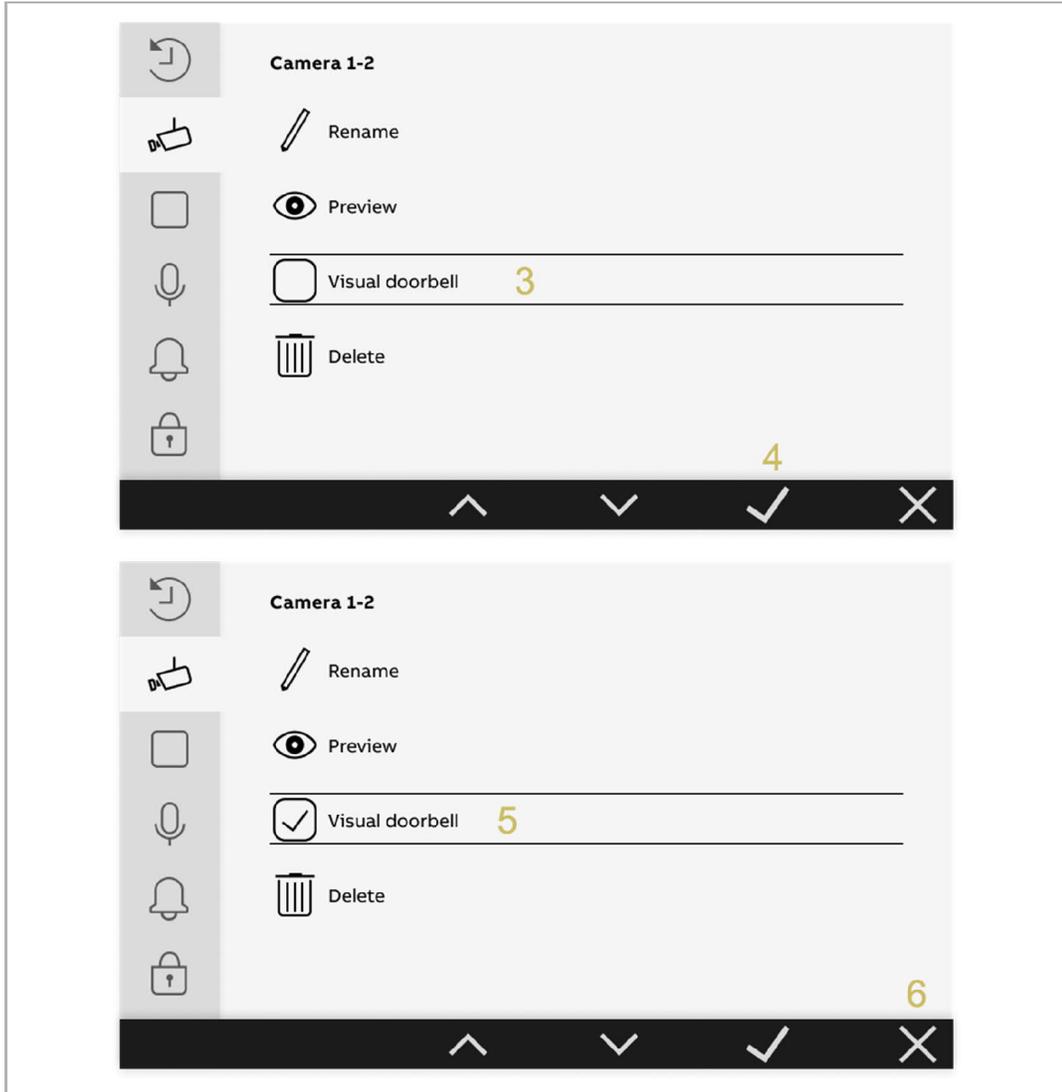


[7] "🔔" will be displayed on the screen to indicate the "Visual doorbell" status.



Note

Only one camera can be set to "Visual doorbell".

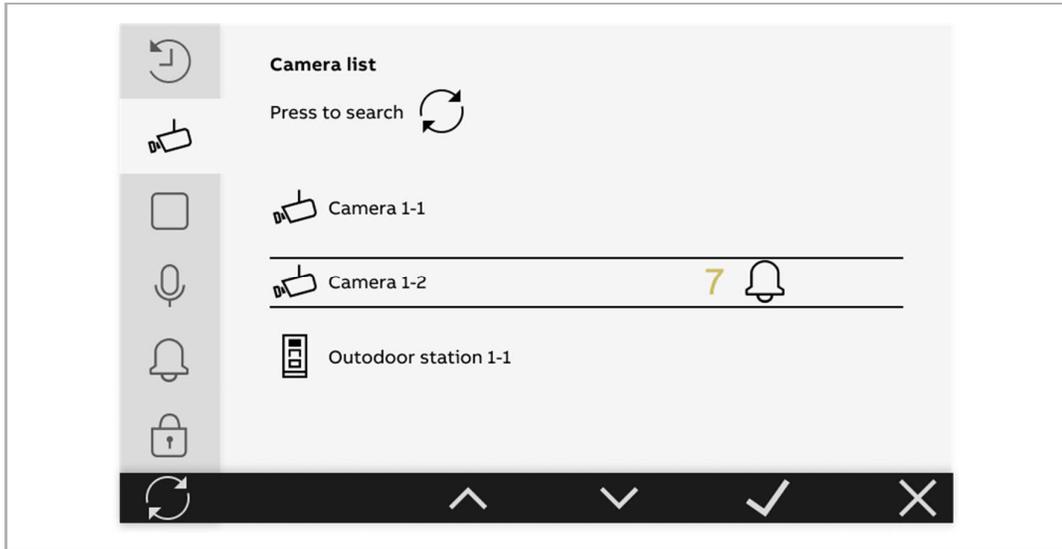

10.1.6 Removing the camera


Please follow the steps below:

[1] On the "Camera list" screen, select the designated camera.


[2] Press " ✓ ".

[3] Select " 🗑️ ".

[4] Press " ✓ ".

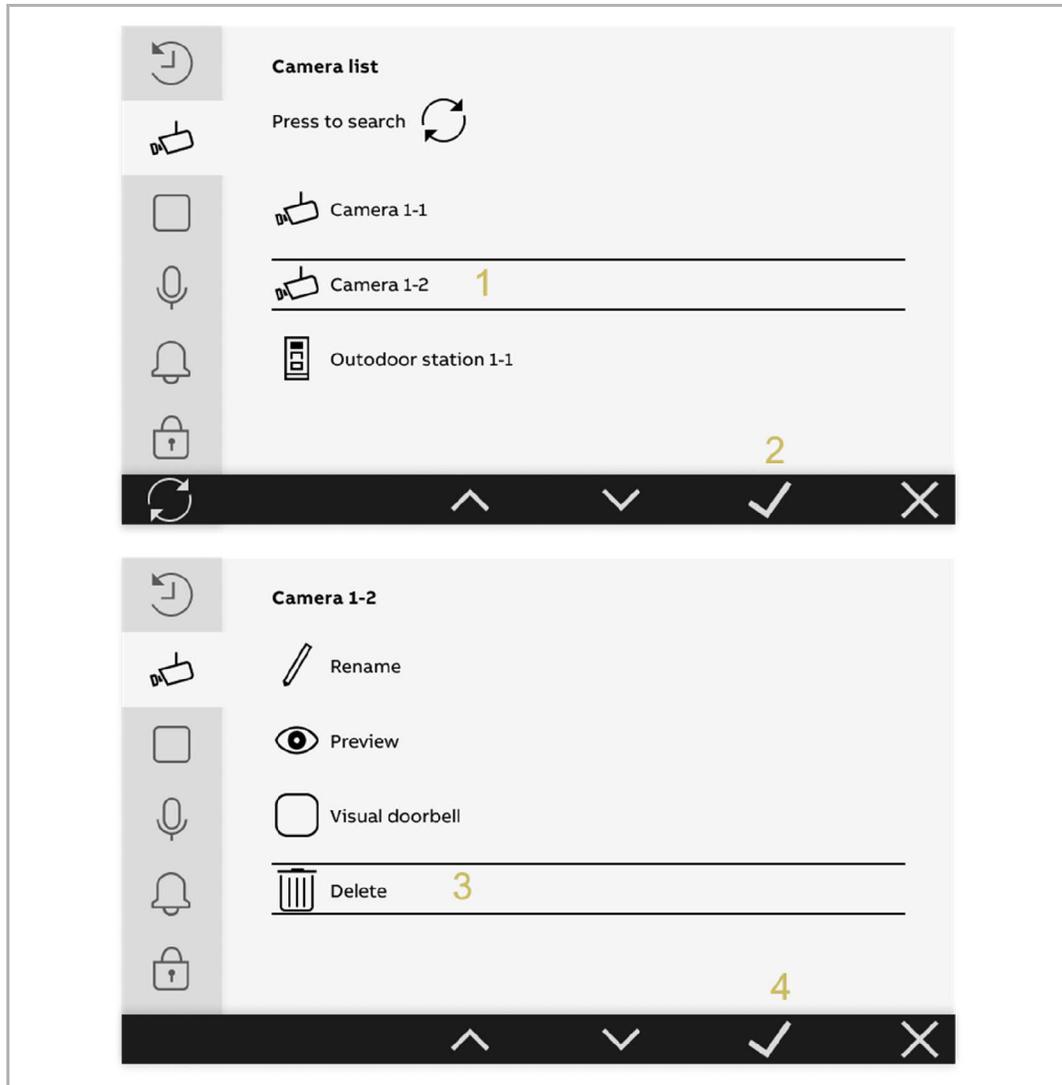

[5] Press " ✓ ".

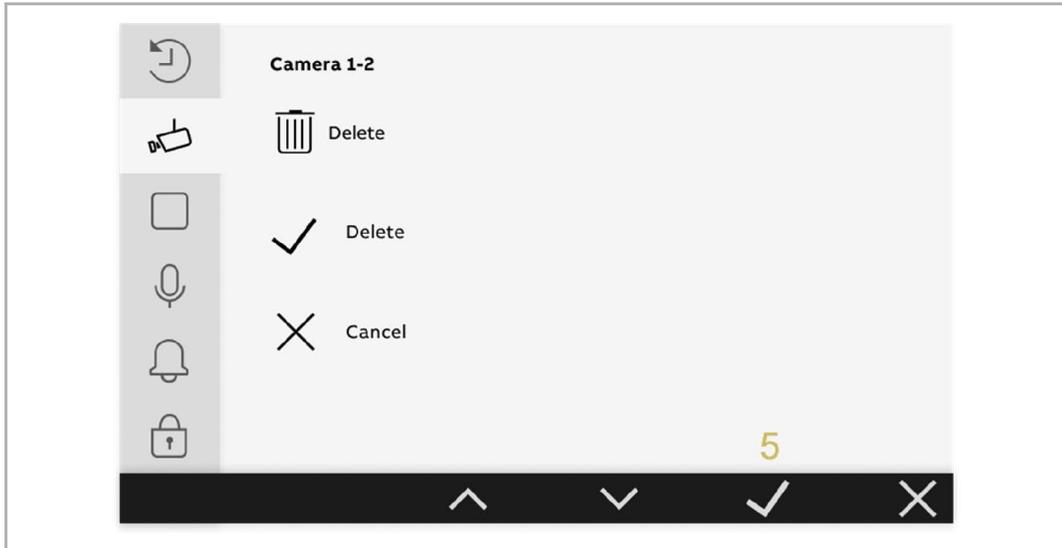


10.2 Program button settings

10.2.1 Accessing the "Program button" screen

Please follow the steps below:


- [1] In standby status, press " 🔑 ".
- [2] Select " □ " on the side menu.
- [3] Press " ✓ " to access the corresponding screen.

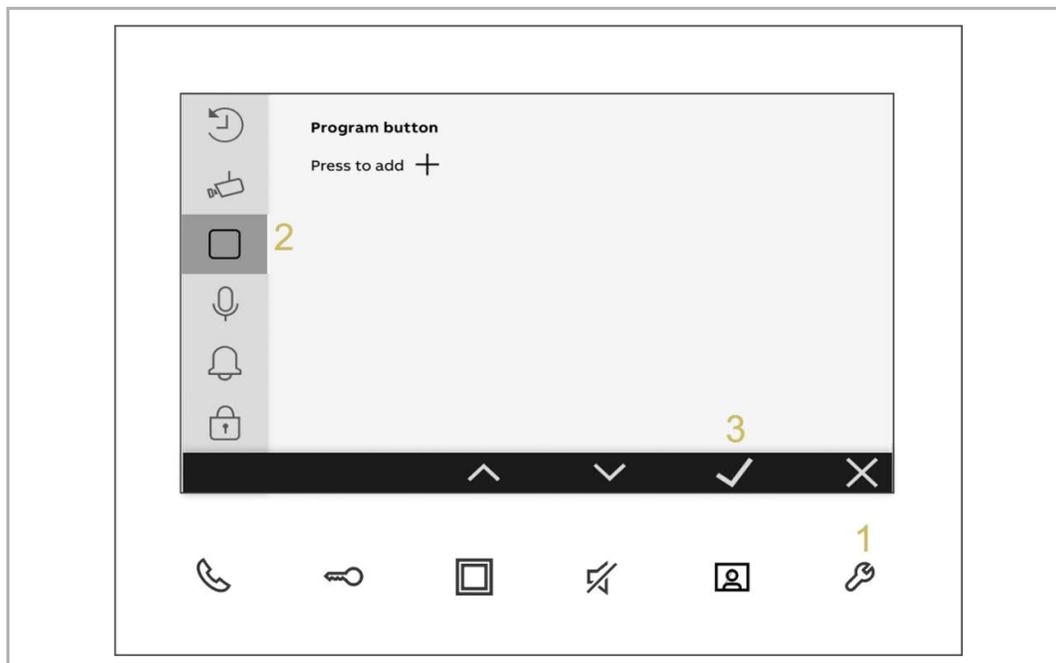


10.2.2 Adding a program function

Please follow the steps below:

- [1] On the "Program button" screen, press " + ".
- [2] Select a function; it can be set to "2nd lock", "Light", "Door", "Garage" or "Actuator".
- [3] Press " ✓ ".

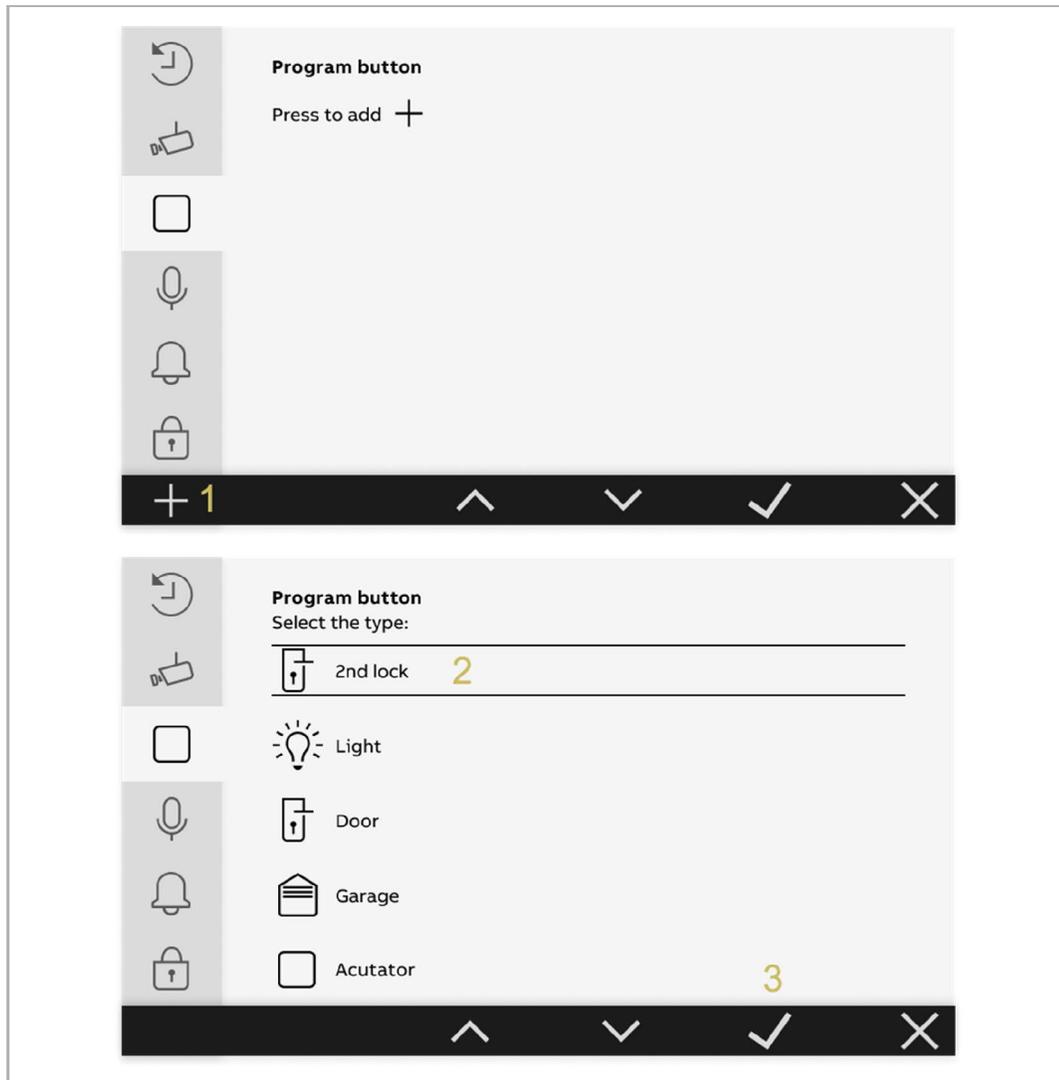

If the function is set to "Light", "Door", "Garage" or "Actuator", you need to select the address.

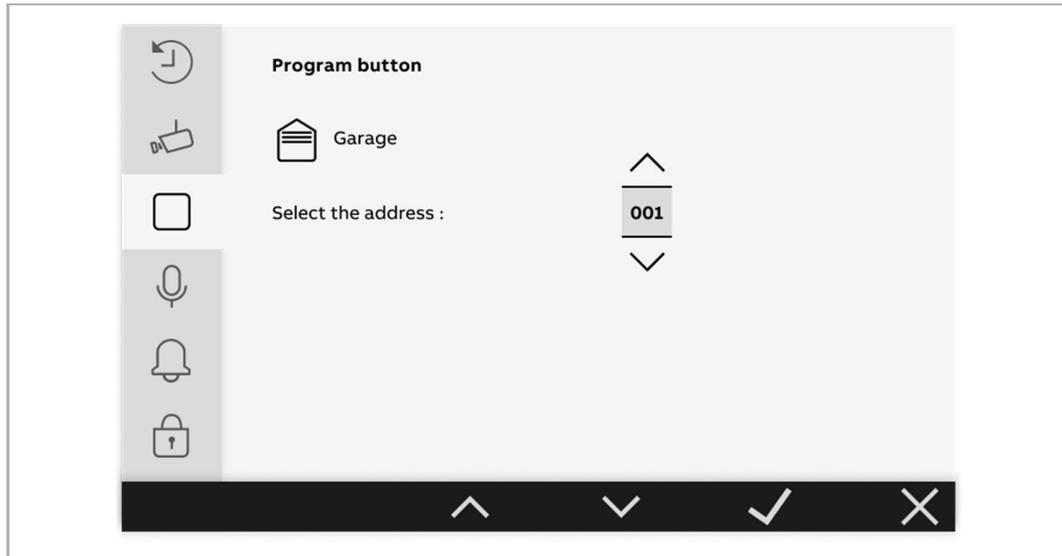**Note**


A maximum of 5 program functions can be set.

10.2.3 Testing the program function

Please follow the steps below:

[1] On the "Program button" screen, select the designated program button.

[2] Press "⏻" to test the function.

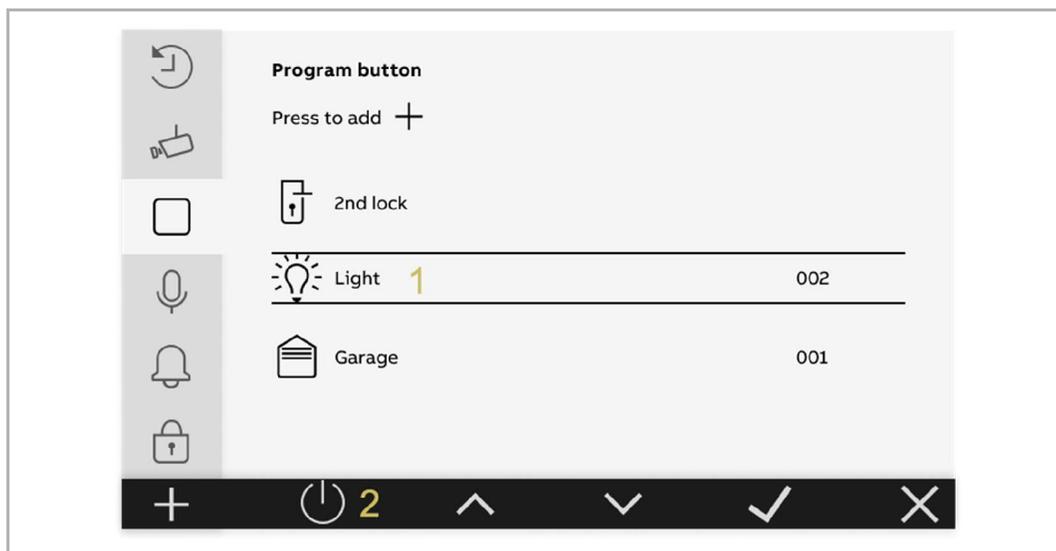

10.2.4 Removing the program function


Please follow the steps below:

[1] On the "Program button" screen, select the designated program button.


[2] Press " ✓ ".

[3] Select " 🗑️ ".

[4] Press " ✓ ".

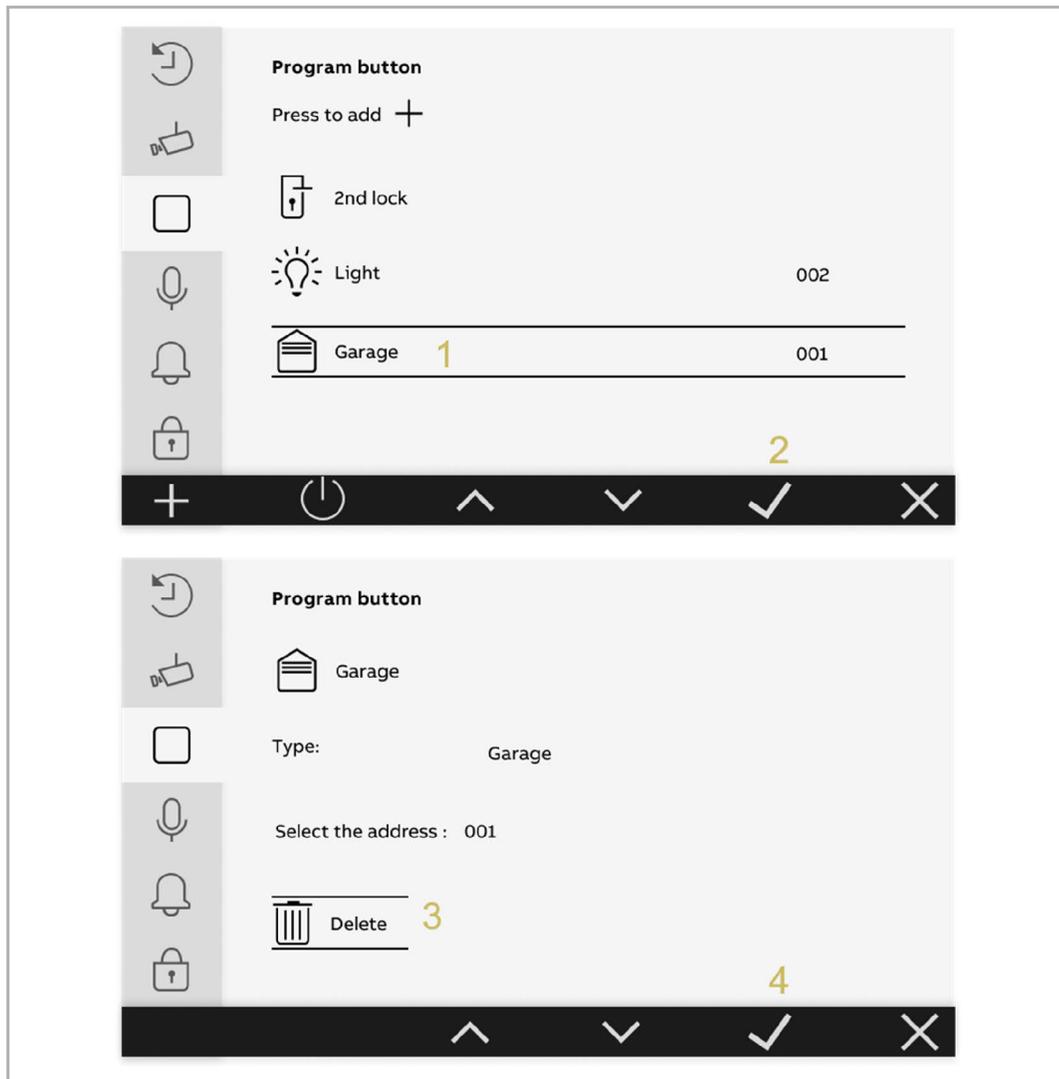

[5] Press " ✓ ".

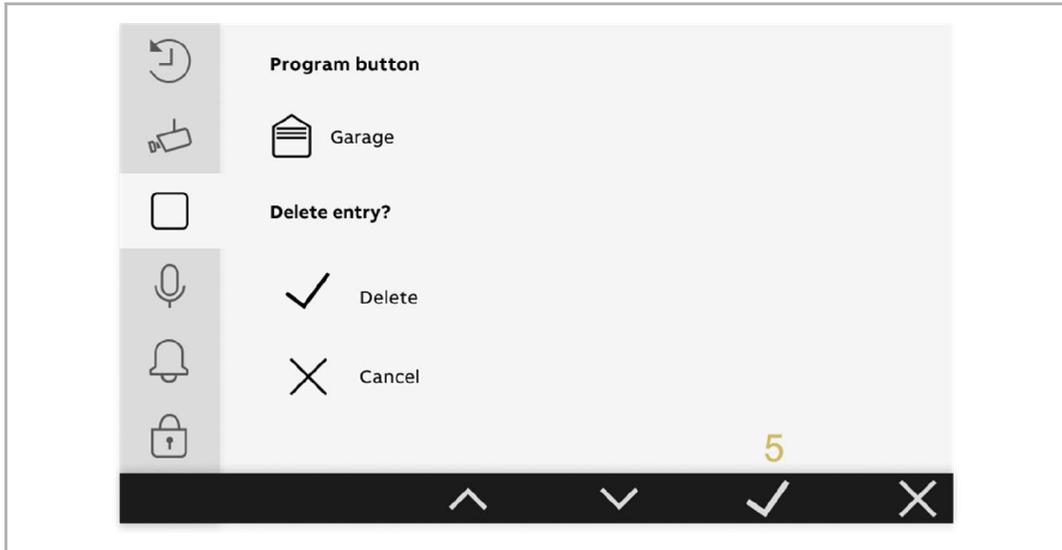


10.3 Intercom settings

10.3.1 Accessing the "Intercom list" screen

Please follow the steps below:


- [1] In standby status, press " 🔑 ".
- [2] Select " 🎤 " on the side menu.
- [3] Press " ✓ " to access the corresponding screen.

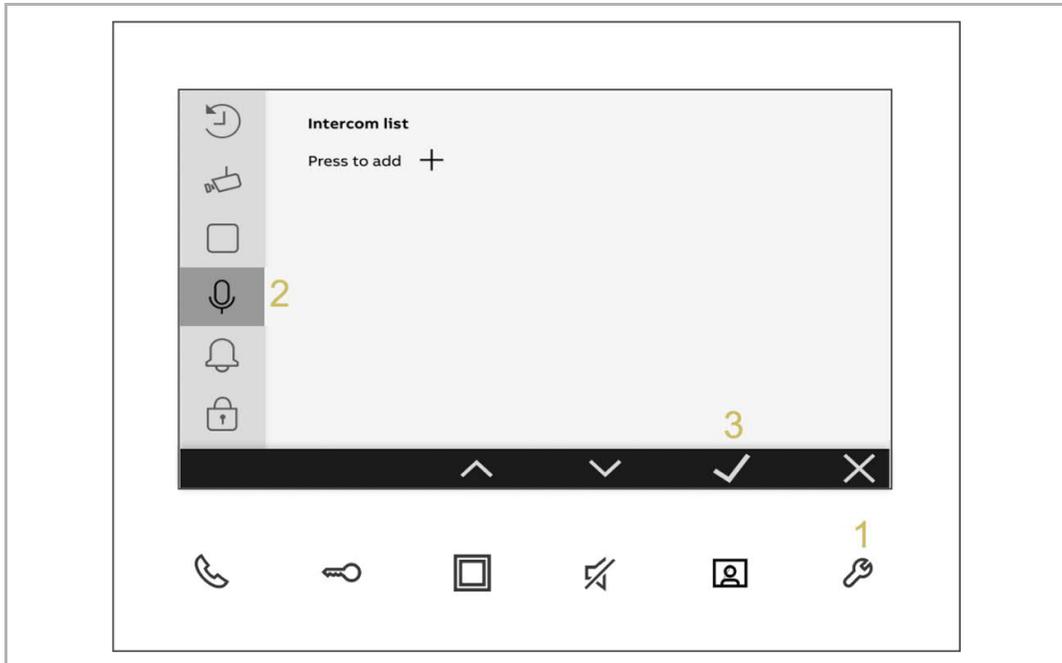

10.3.2 Adding an intercom

Please follow the steps below:


- [1] On the "Intercom list" screen, press " + ".
- [2] Select the intercom type. It can be set to "Intercom internal", "Intercom external" or "Guard unit".
- [3] Press " ✓ ".

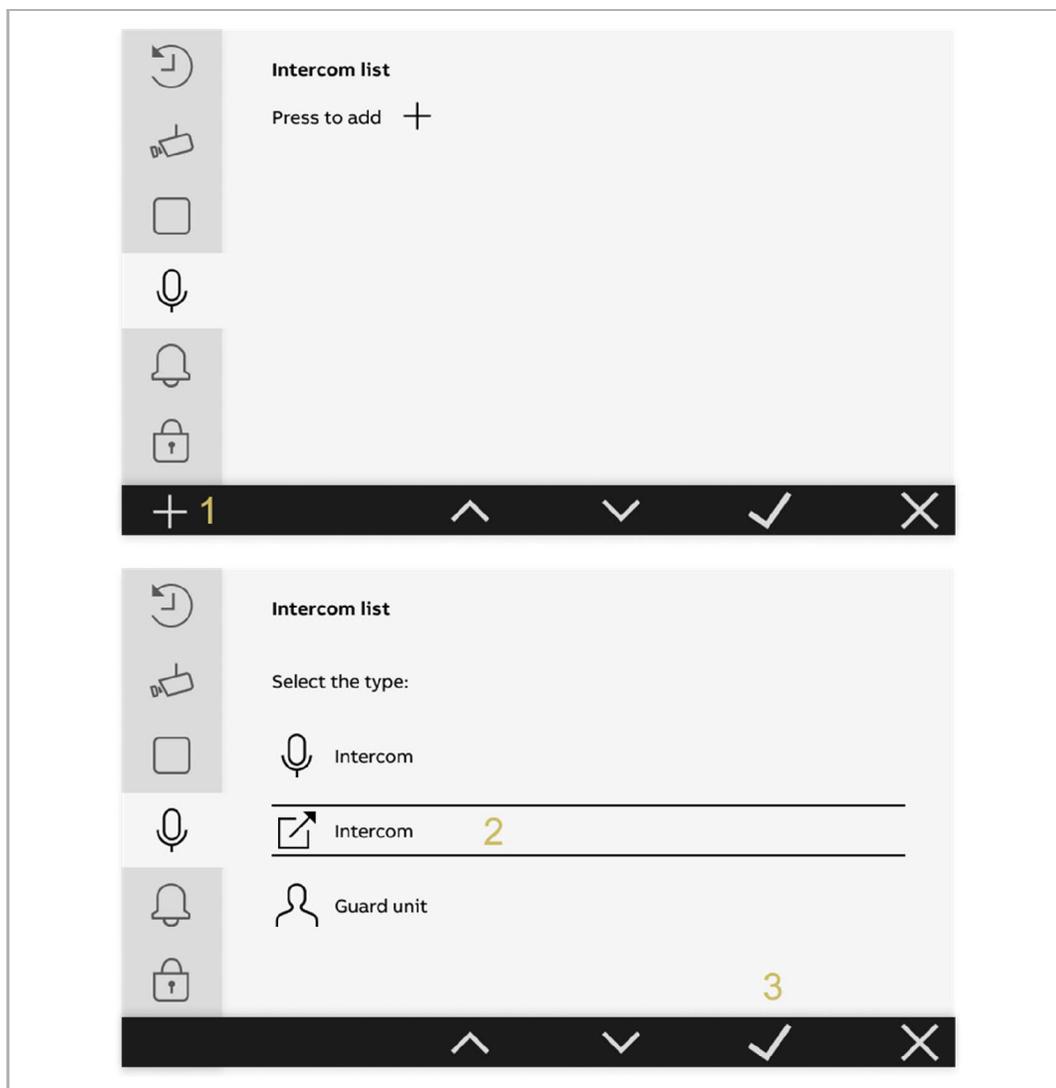

[4] Select the address.

[5] Press " ✓ ".

If the intercom type is set to "Intercom internal", you can skip step 4 - 5.

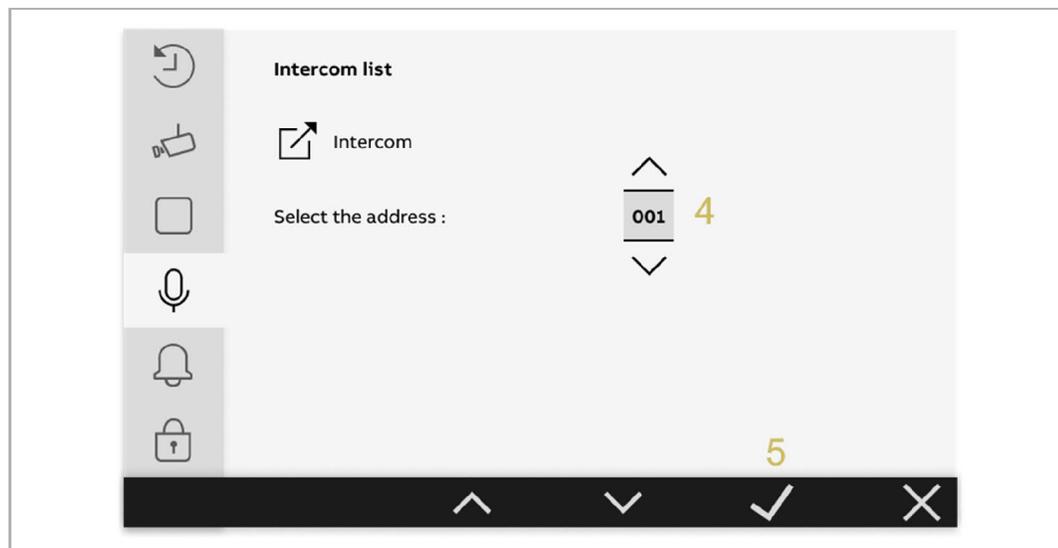

Note

A maximum of 5 intercoms can be set.

10.3.3 Removing the intercom


Please follow the steps below:

[1] On the "Intercom list" screen, press the designated intercom.


[2] Press " ✓ ".

[3] Select " 🗑️ ".

[4] Press " ✓ ".

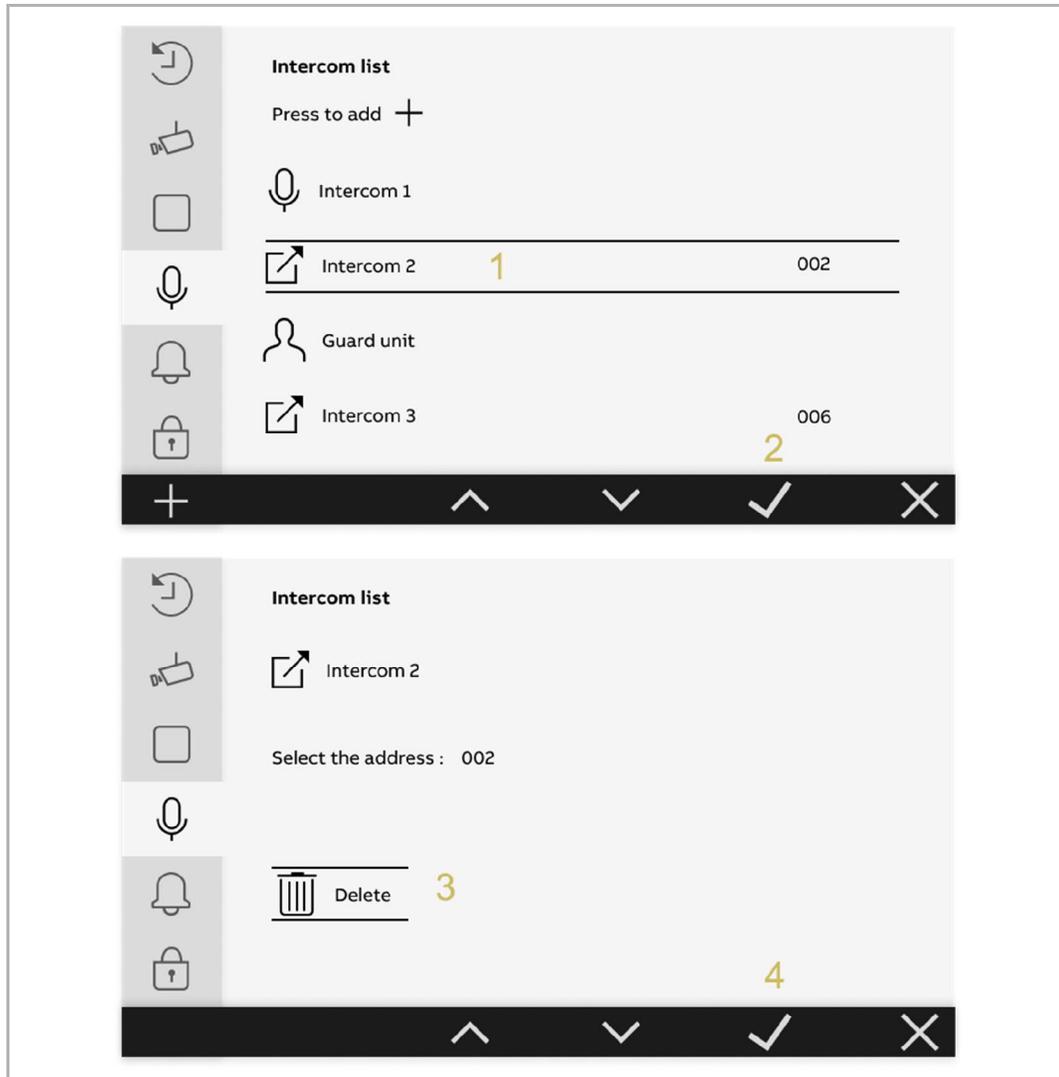

[5] Press " ✓ ".

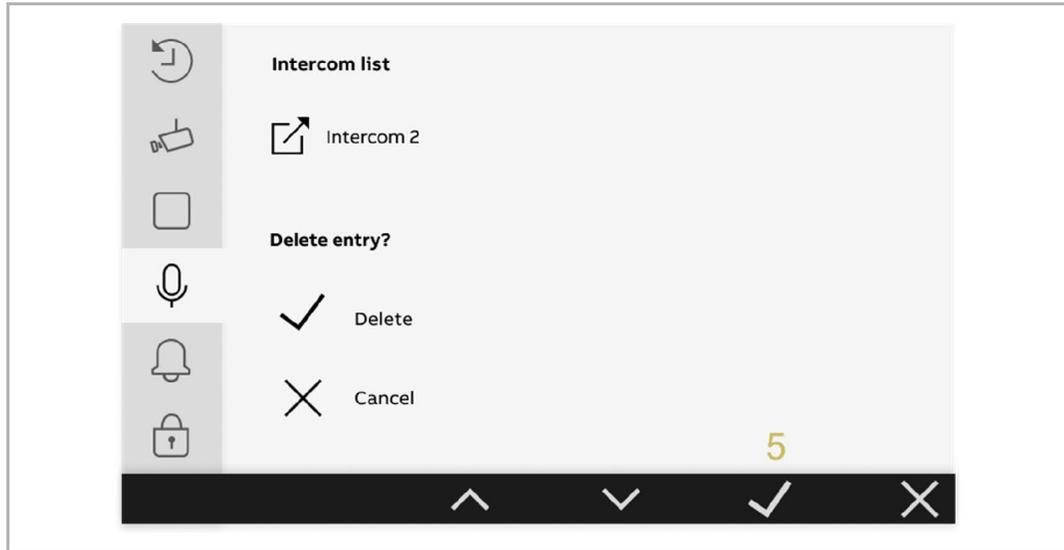


10.4 Audio settings

10.4.1 Accessing the "Audio settings" screen

Please follow the steps below:

- [1] In standby status, press " 🔑 ".
- [2] Select " 🔔 " on the side menu.
- [3] Press " ✓ " to access the corresponding screen.

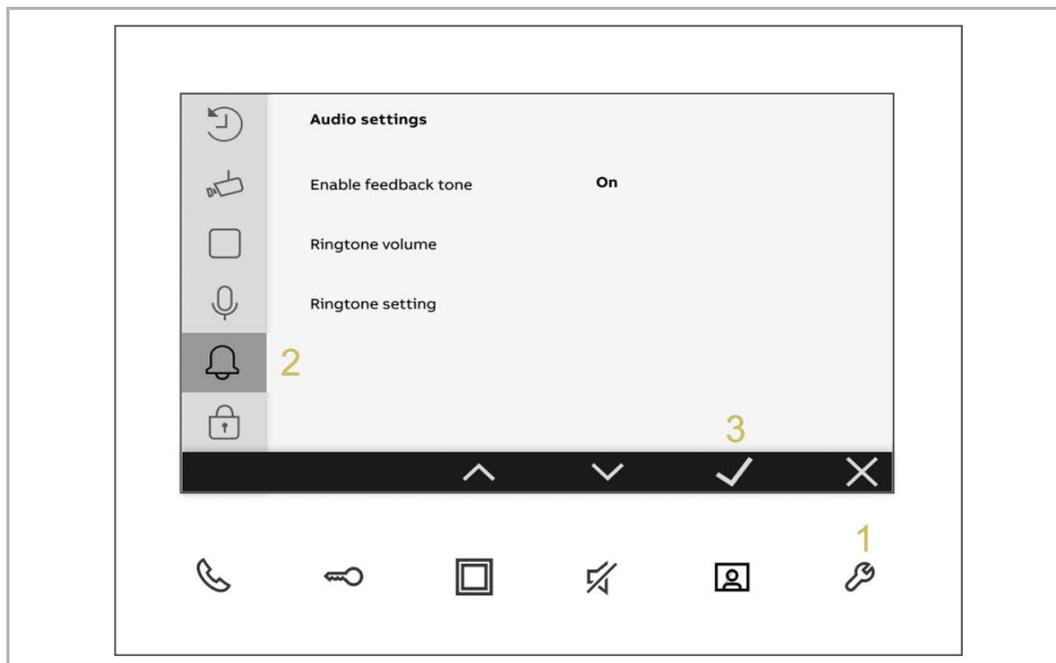


10.4.2 Setting the feedback tone

Please follow the steps below:

[1] On the "Audio settings" screen, select "Enable feedback tone".

[2] Press " ^ " or " v " to enable/disable the function.

[3] Press " ✓ ".

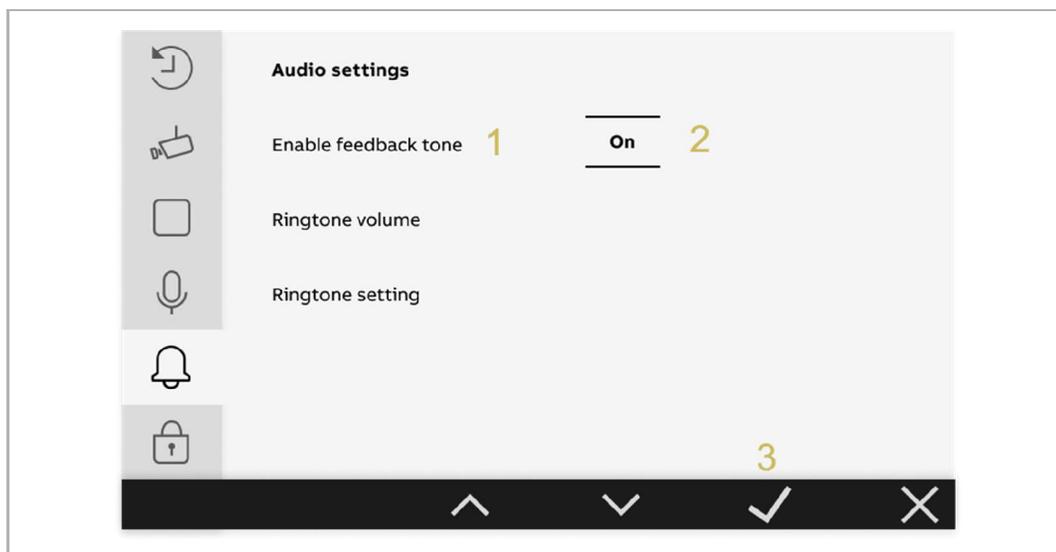

10.4.3 Setting the ringtone volume


Please follow the steps below:

[1] On the "Audio settings" screen, select "Set ringtone volume".

[2] Press " ✓ ".

[3] Press " < " or " > " to adjust the volume.

[4] Press " ✓ ".

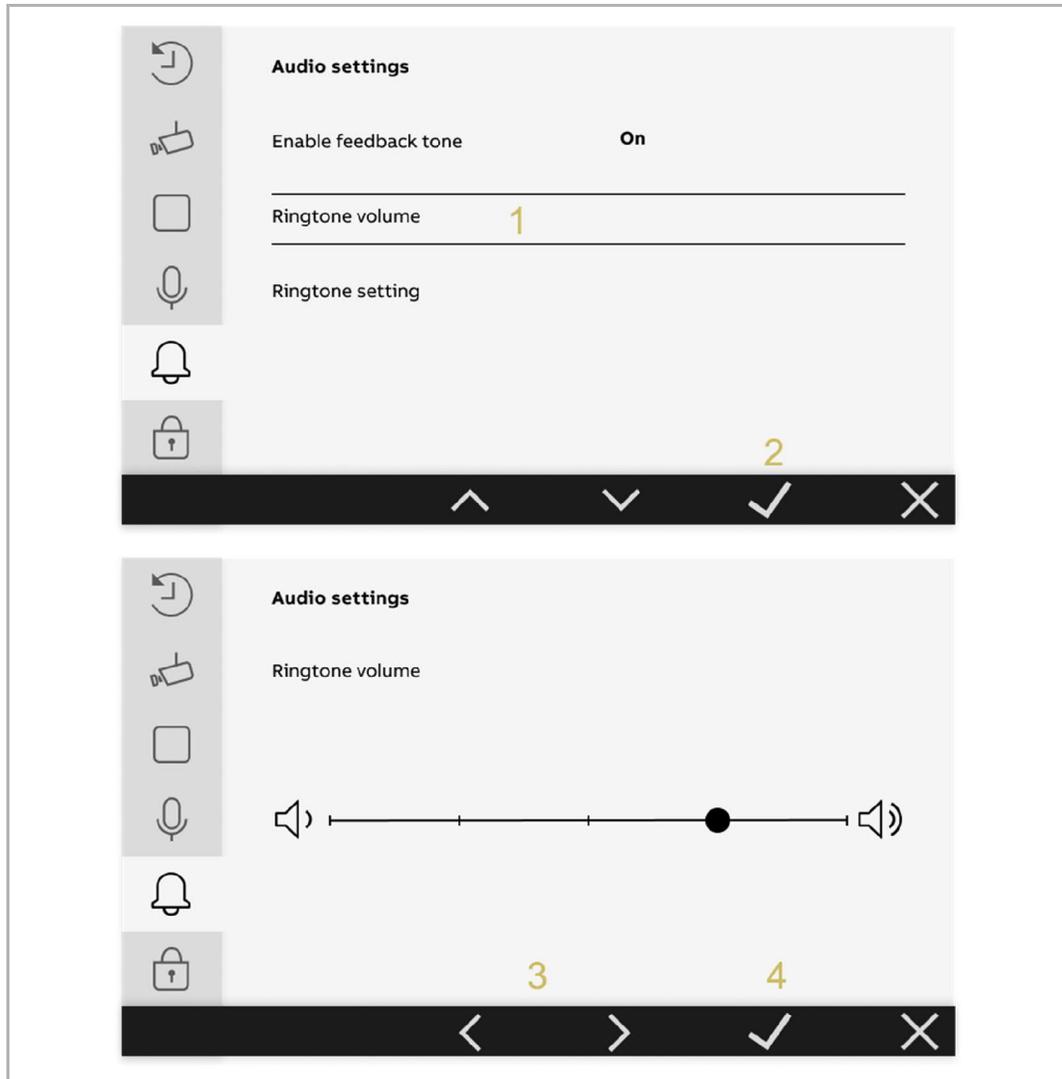

10.4.4 Setting the ringtone type


Please follow the steps below:

- [1] On the "Audio settings" screen, select "Ringtone setting".
- [2] Press " ✓ ".
- [3] Select the designated device, it can be "Default outdoor station", "Other outdoor station", "Intercom", "Doorbell ringtone" or "Guard unit".
- [4] Press " ✓ ".



[5] Select the ringtone.

[6] Press " ✓ ".

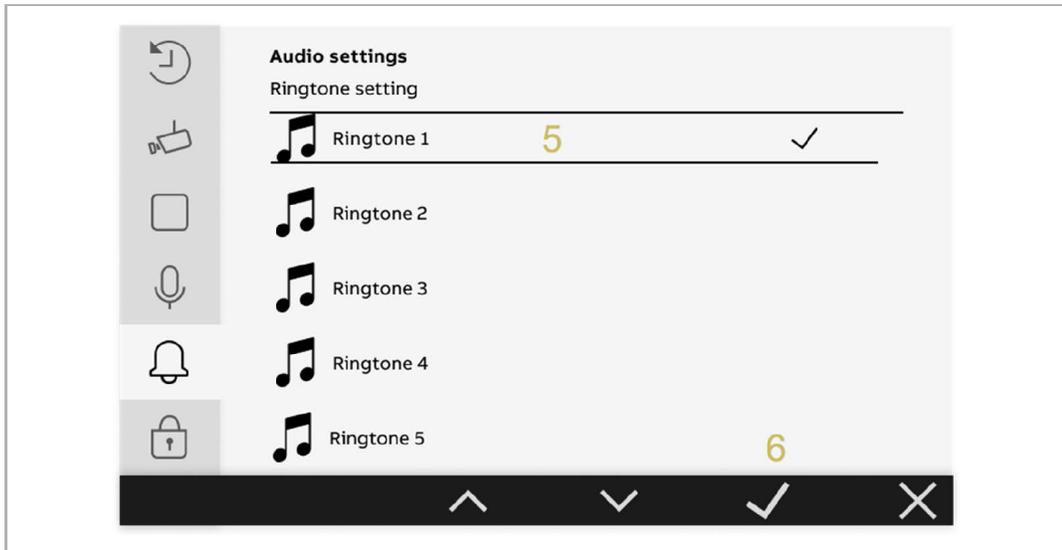


10.5 Unlock password

**Note**

This function can only be set on the primary indoor station.


Please follow the steps below:

- [1] In standby status, press " 🔑 ".
- [2] Select " 🔒 " on the side menu.
- [3] Press " ✓ ".

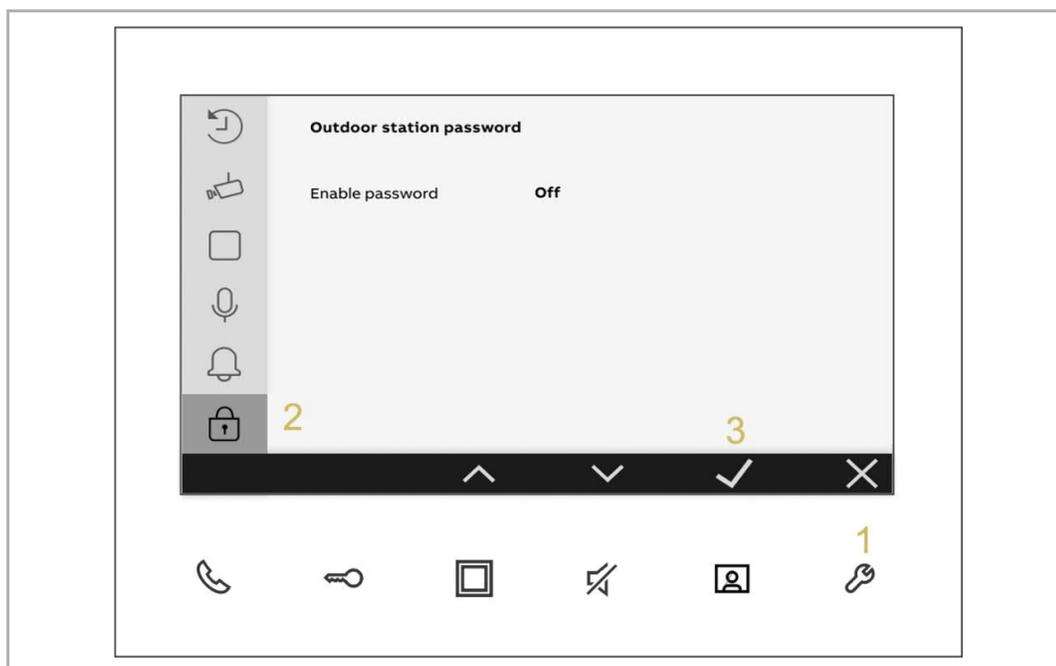**Note**

The feedback tone will be enabled automatically when carrying out this setting.


- [4] Select "Enable password" and set the value to "On".
- [5] Select "Enter password" and press " ^ " or " v " to set the value for each digit one by one (3-8 digits).

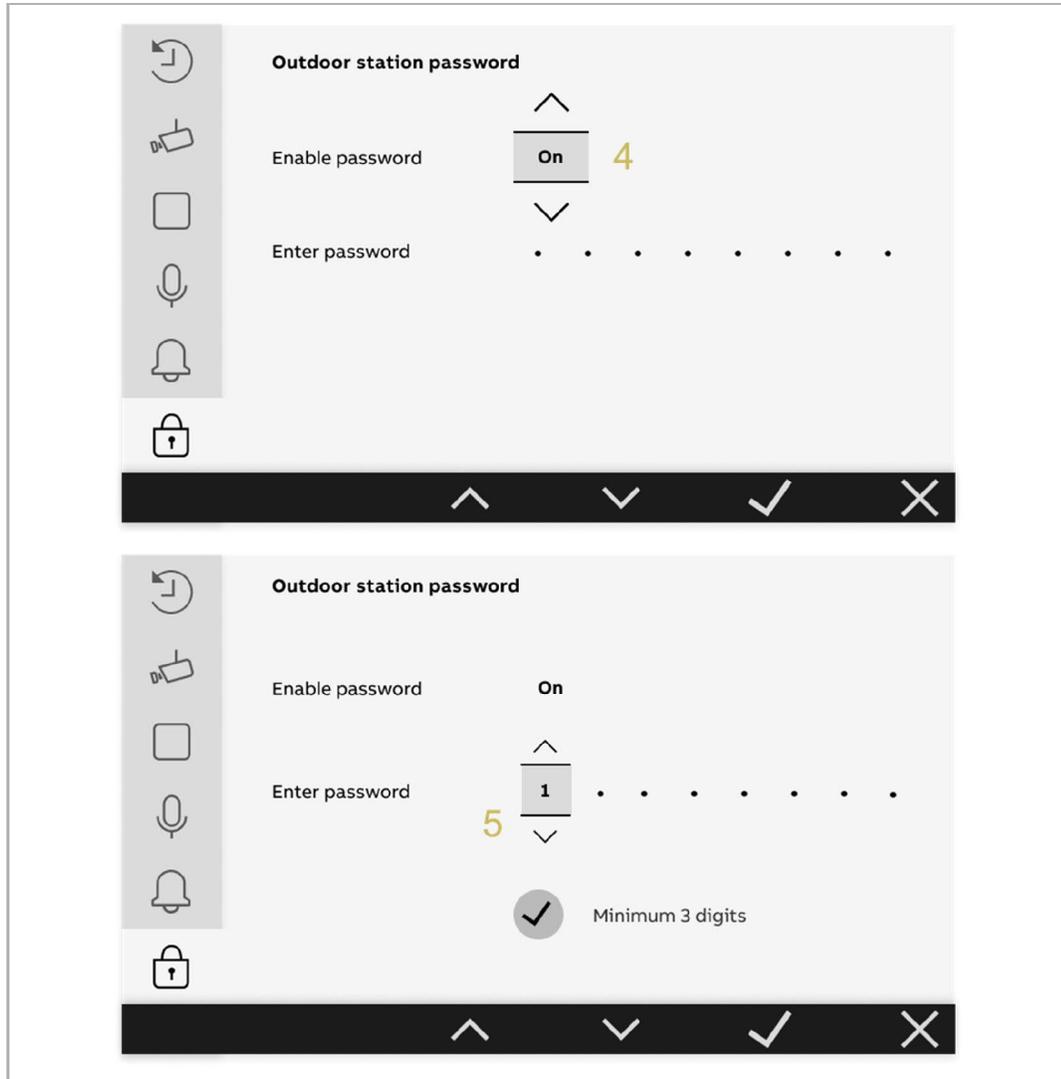

[6] " ✓ " will be displayed on the screen when the number of the digits reaches 3.

[7] Select "Save".


[8] Press " ✓ " .

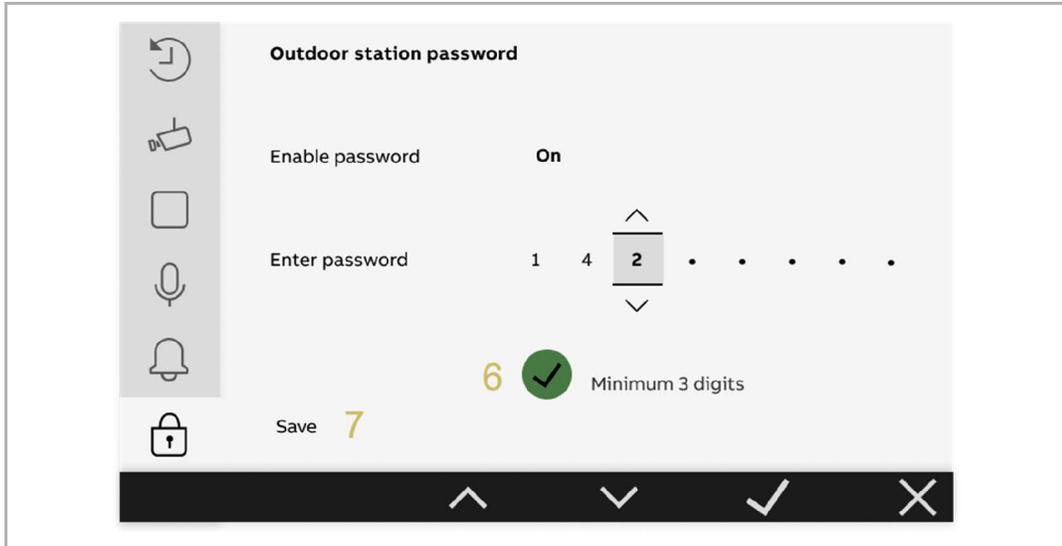

10.6 Date and time settings

Please follow the steps below:

- [1] In standby status, press "🔑".
- [2] Select "📅" on the side menu.
- [3] Press "✓".
- [4] Press "∧" or "∨" to set the date.
- [5] Press "∧" or "∨" to set the time.

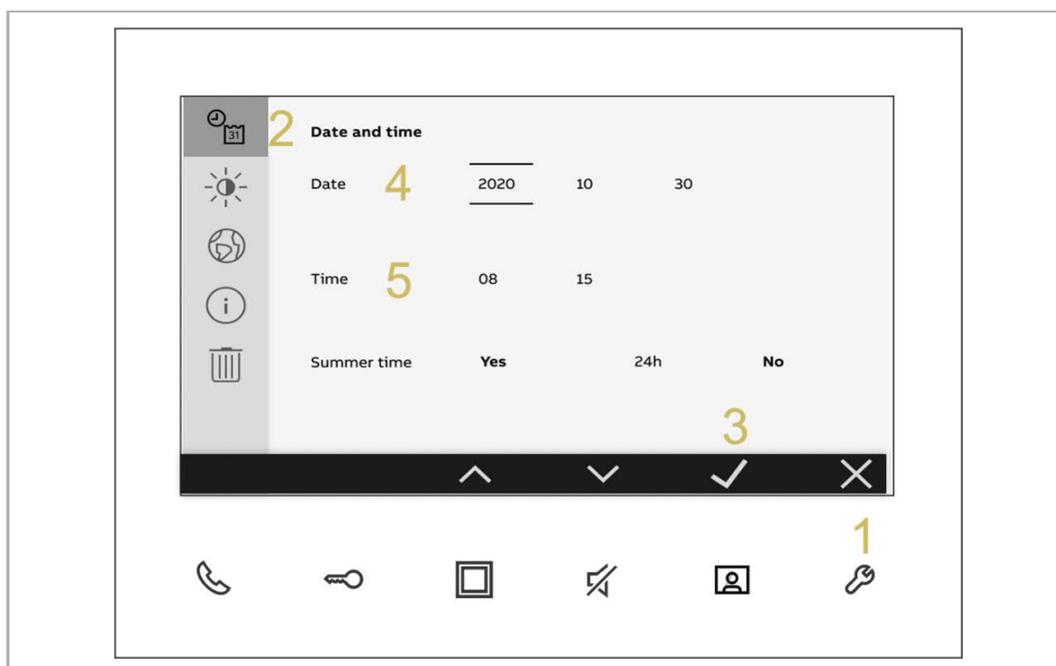


Note

It is recommended to correct your time once a year to ensure normal operation.

[6] Press " ^ " or " v " to enable/disable the "Summer time" function.

[7] Press " ^ " or " v " to enable/disable the "24h" function.


[8] Press " ✓ ".

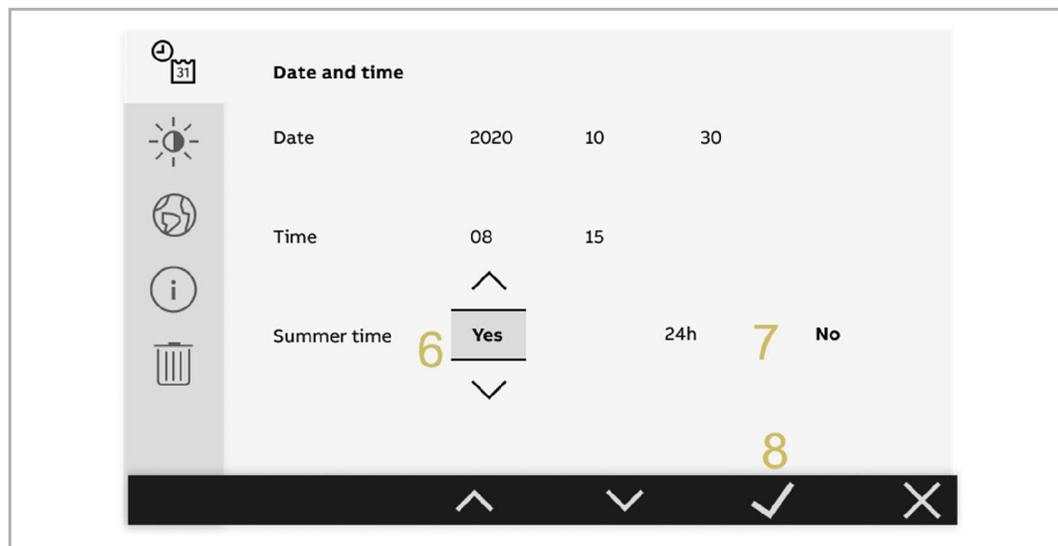

10.7 Display settings

Please follow the steps below:


- [1] In standby status, press " ⚙️ ".
- [2] On the "Settings" screen, select " ☀️ " on the side menu.
- [3] Press " ✓ ".
- [4] Press " < " or " > " to adjust the brightness.
- [5] Press " ✓ ".

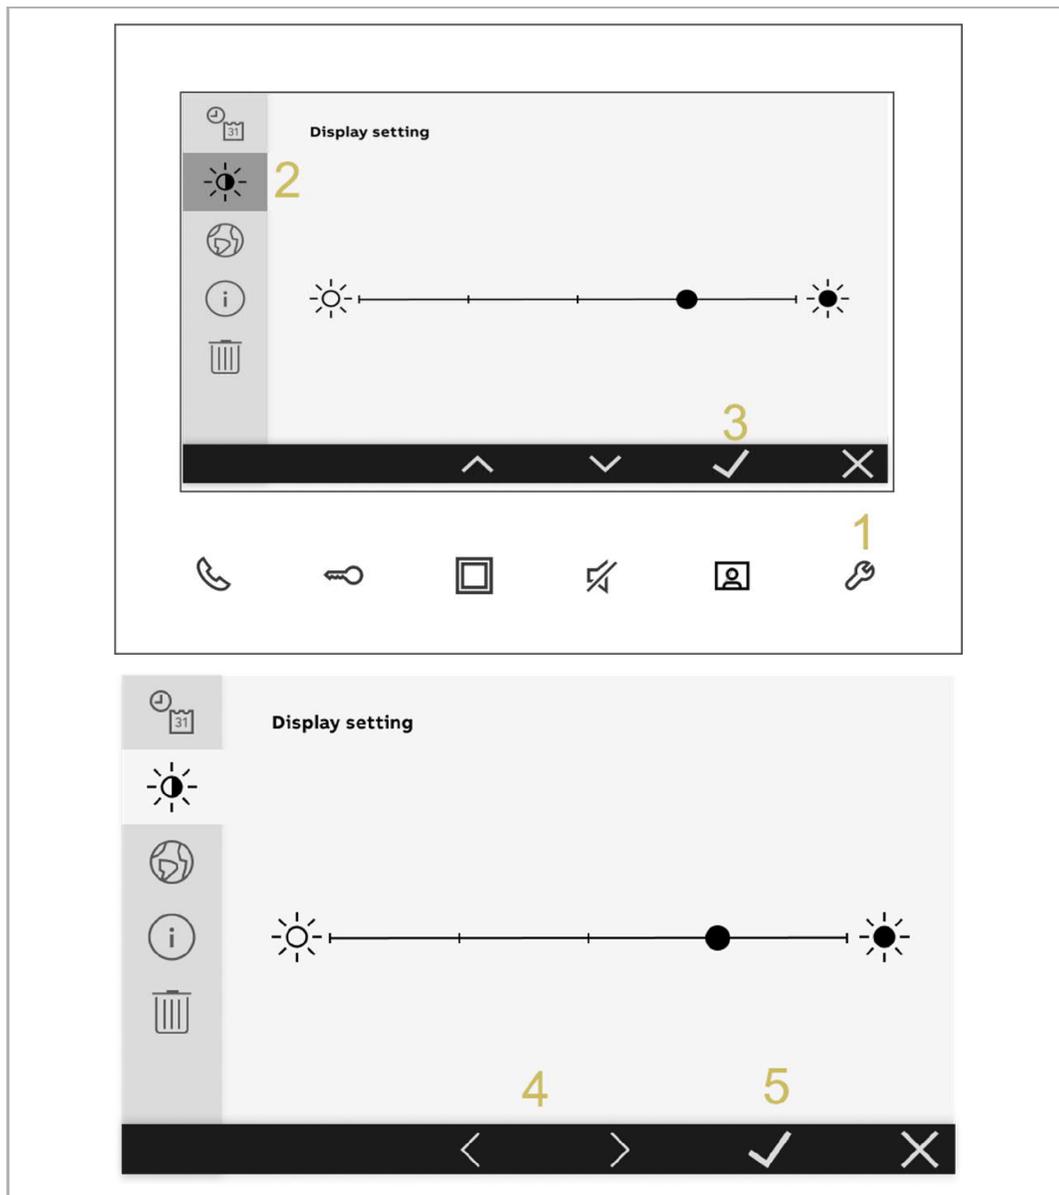

10.8 Language setting

Please follow the steps below:


- [1] In standby status, press "🔑".
- [2] On the "Settings" screen, select "🌐" on the side menu.
- [3] Press "✓".
- [4] Press "^" or "v" to select the language.
- [5] Press "✓".

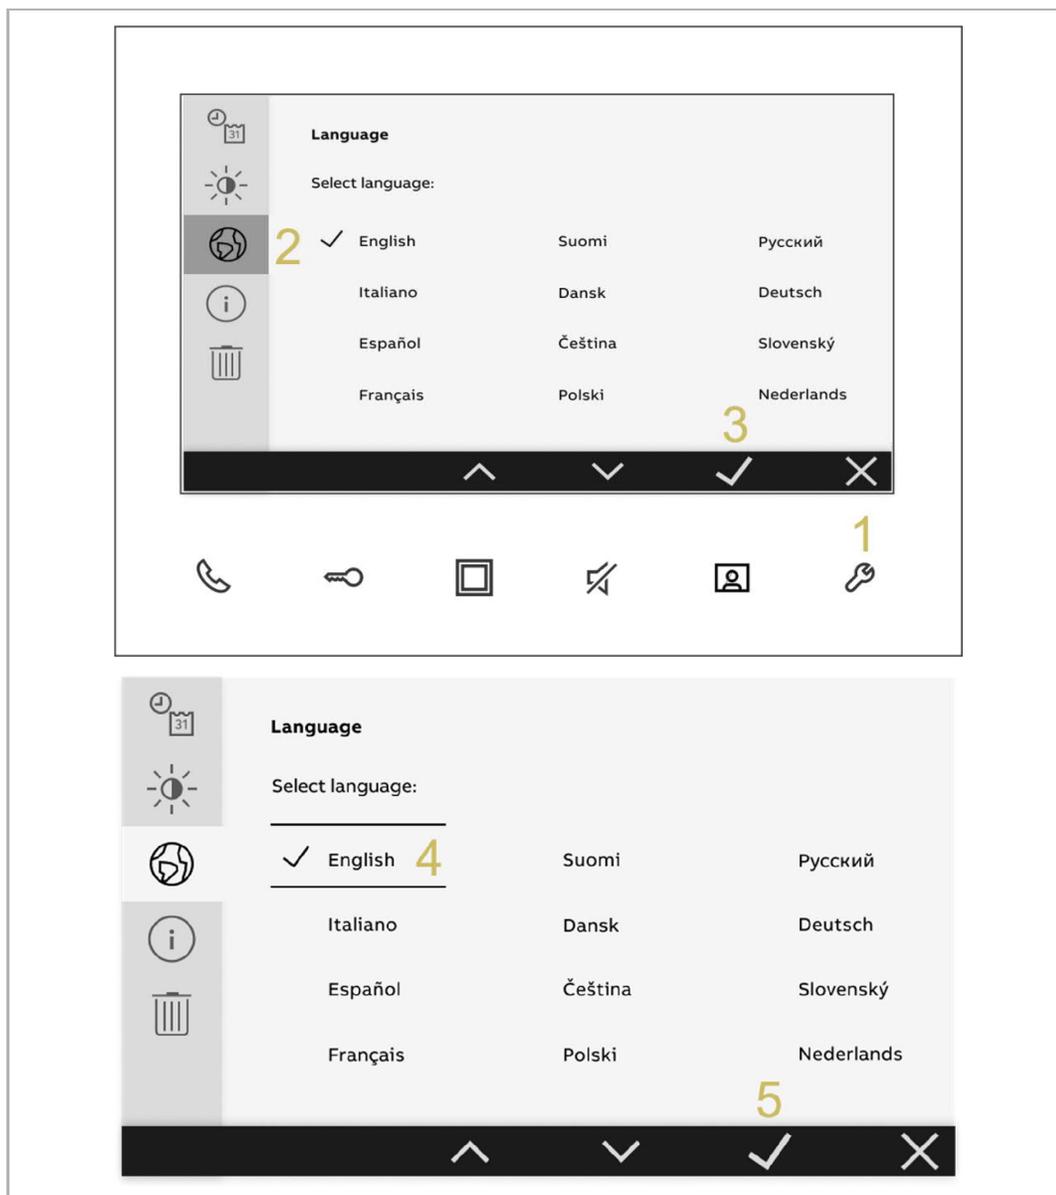

10.9 About

Please follow the steps below:

- [1] In standby status, press "🔑".
- [2] Select "i" on the side menu.
- [3] Display the software version.
- [4] Display the indoor station type: "Primary" or "Secondary".
- [5] Display the indoor station address.
- [6] Display the default outdoor station address.
- [7] Scan the QR code to obtain the product manual.

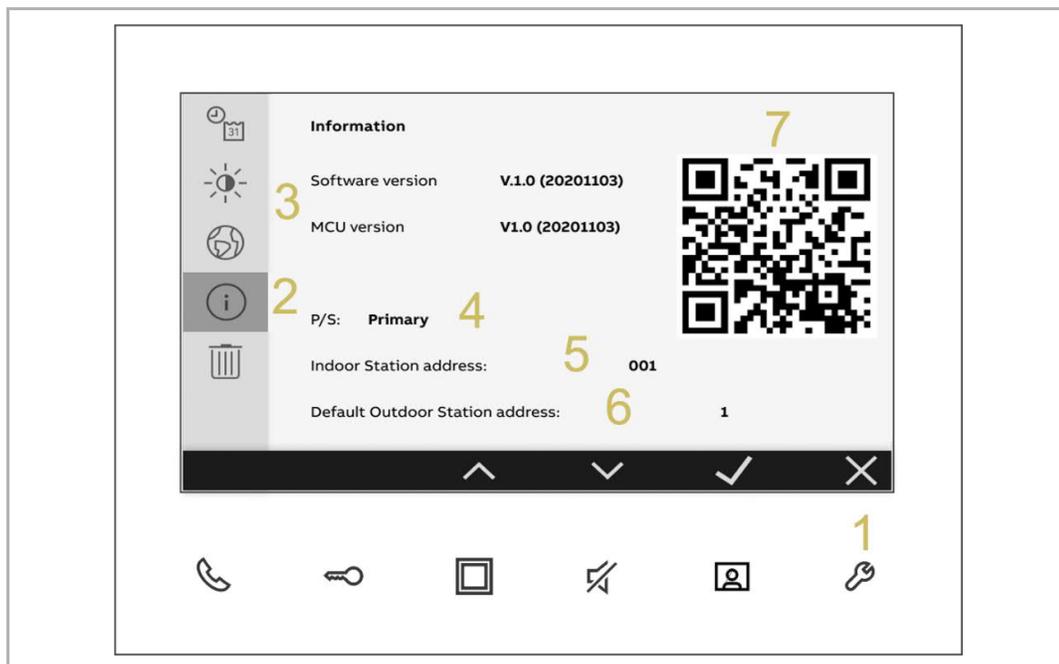


10.10 Restoring to factory default

Please follow the steps below:

[1] In standby status, press " 🔑 ".

[2] On the "Settings" screen, select " 🗑️ " on the side menu.

[3] Press " ✓ ".

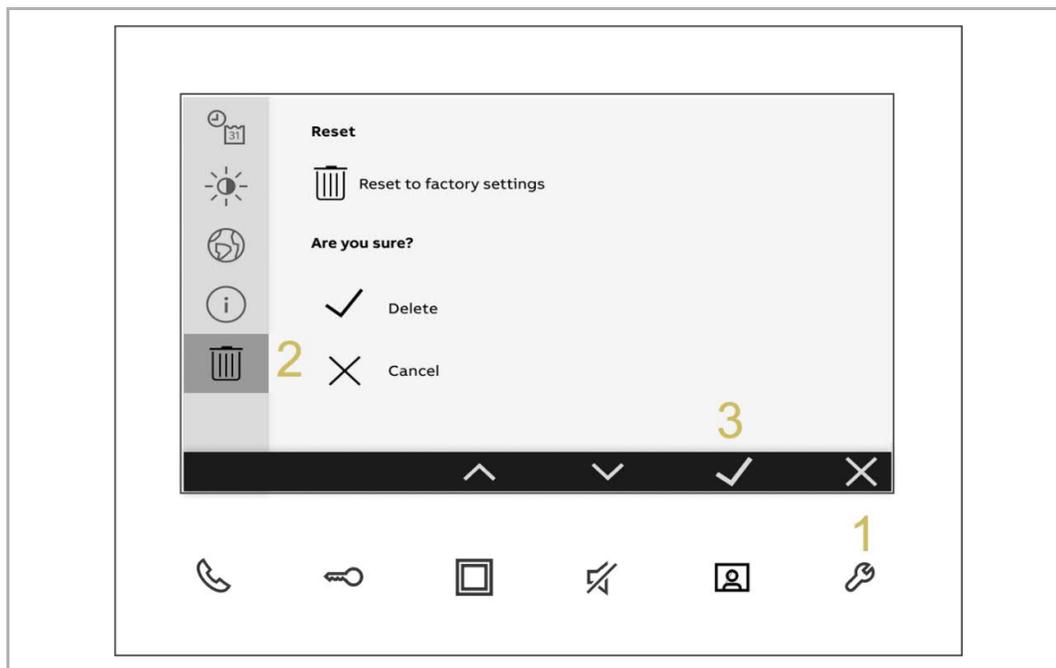

11 Cyber security

11.1 Disclaimer

M2241.-W products are designed to be connected and to communicate information and data via a 2-wire interface. It is the customer's sole responsibility to provide and continuously ensure a secure connection between the product and the customer's 2-wire system, and to establish and maintain appropriate measures to protect the M2241.-W product, 2-wire system and interfaces against any kind of security breaches, unauthorised access, interference, intrusion, leakage and/or theft of data or information. ABB Ltd and its affiliates are not liable for damages and/or losses related to such security breaches, unauthorised access, interference, intrusion, leakage and/or theft of data or information.

Although ABB provides functionality testing on the products and updates that we release, you should institute your own testing program for any product updates or other major system updates (to include but not limited to code changes, configuration file changes, third party software updates or patches, hardware change out, etc.) to ensure that the security measures that you have implemented have not been compromised and system functionality in your environment is as expected.

12 Notice

We reserve the right to at all times make technical changes as well as changes to the contents of this document without prior notice.

The detailed specifications agreed to at the time of ordering apply to all orders. ABB accepts no responsibility for possible errors or incompleteness in this document.

We reserve all rights to this document and the topics and illustrations contained therein. The document and its contents, or excerpts thereof, must not be reproduced, transmitted or reused by third parties without prior written consent by ABB.



Contact us

ABB Xiamen Smart Technology Co., Ltd.
No. 881, FangShanXiEr Road, Xiang'An Industrial
Area, Torch Hi-Tech Industrial Development
Zone, Xiamen
Tel: +86 592 295 9000
Fax: +86 592 562 5072

www.abb.com

Approvals and Compliances

Notice

We reserve the right to at all times make technical changes as well as changes to the contents of this document without prior notice. The detailed specifications agreed upon apply for orders. ABB accepts no responsibility for possible errors or incompleteness in this document.

We reserve all rights to this document and the topics and illustrations contained therein. The document and its contents, or extracts thereof, must not be reproduced, transmitted or reused by third parties without prior written consent by ABB.